


## Loader Boom Bushings Remove and Install

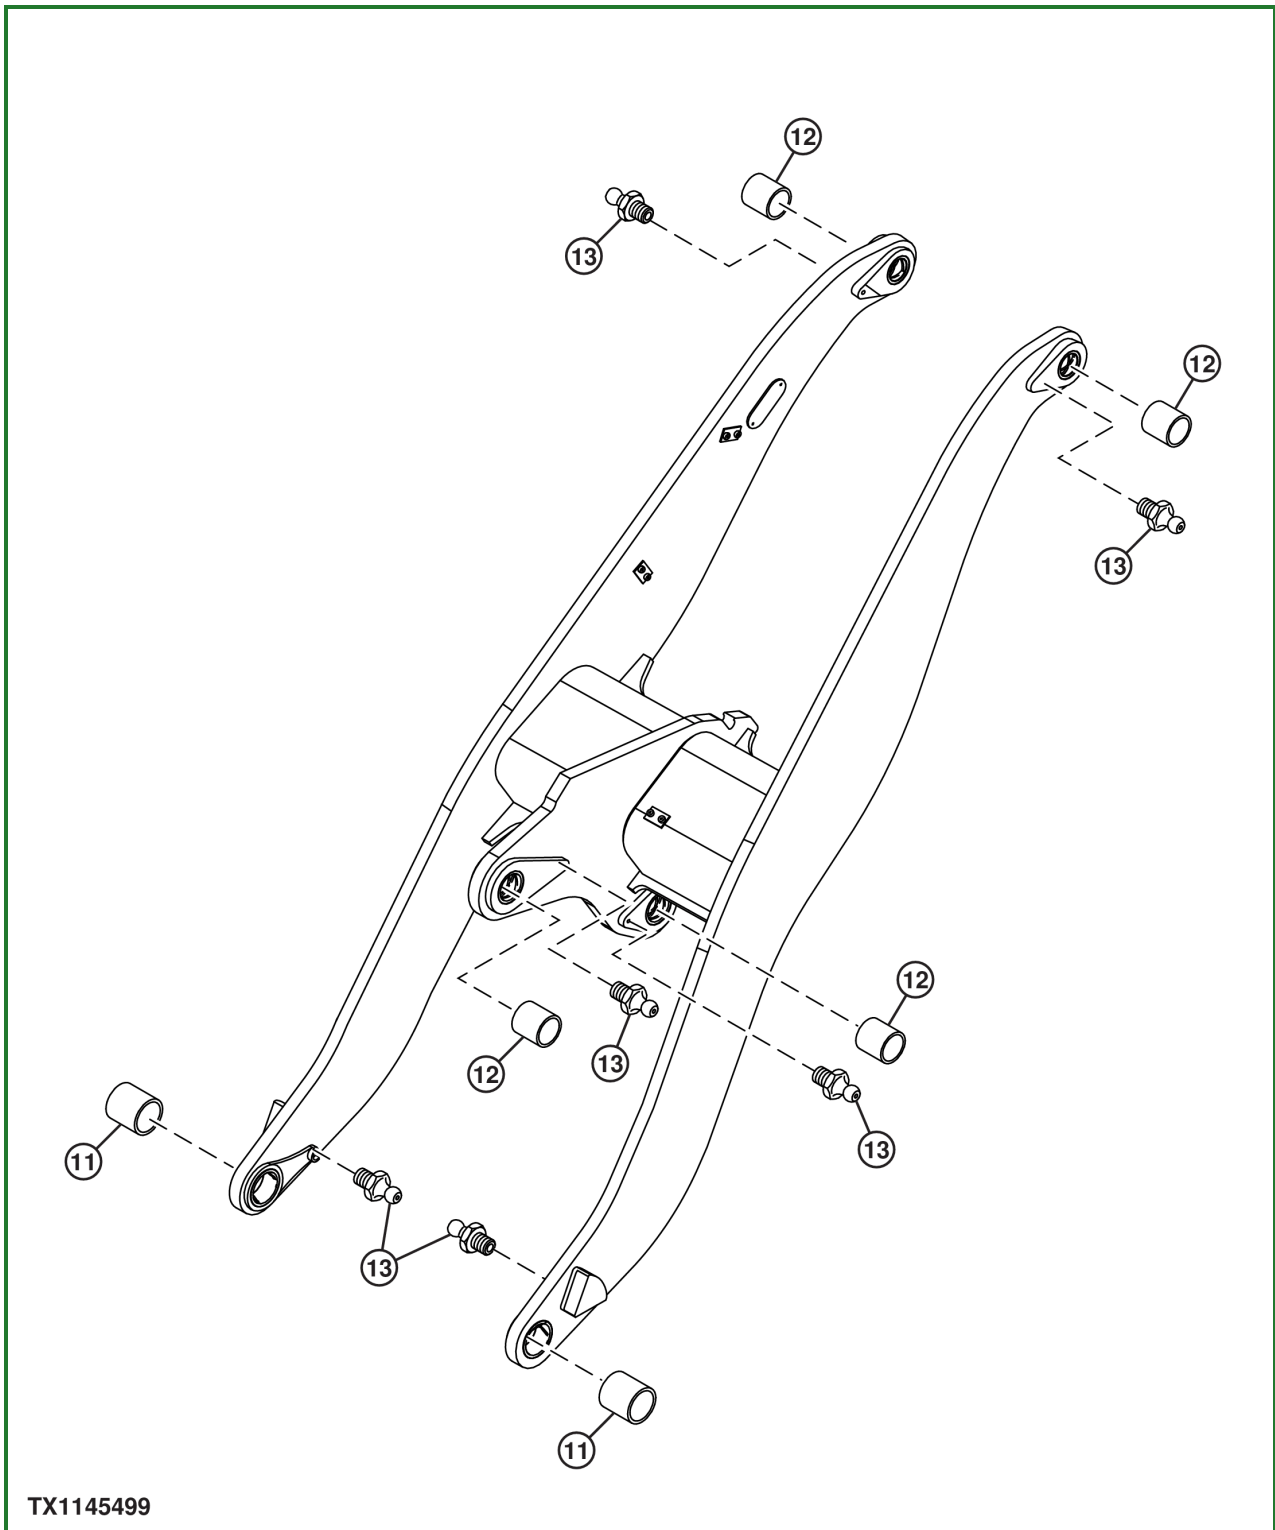

### TX1145499-UN: Loader Boom Bushings

**LEGEND:**

11 - Bushing (2 used)

12 - Bushing (4 used)

13 - Lubrication Fitting (6 used)

1. Remove loader boom. See [Boom and Bucket Linkage Remove and Install](#) . (Group 3140.)

2.

**NOTE:**

Apply NEVER-SEEZ® Lubricant or an equivalent on outer surface of new bushings and

*bores. Center new bushings in boom bores.*

Replace bushings (11 and 12) using D01047AA Puller Set and JT01800 Driver Set.

3. Install loader boom. [See Boom and Bucket Linkage Remove and Install .](#) (Group 3140.)

Go to [Section\\_31:Group\\_3140](#)

BG71631,00007E6-19-20131018