


Remove And Install Transmission Gear Train

1. Remove transmission . (See procedure in Group 0300.)

2.

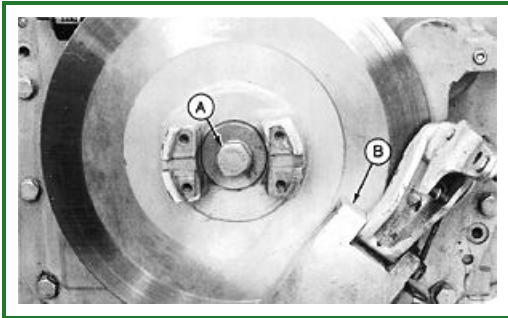


T7526IQ-UN: Cap Screw And Brake Assembly

Remove brake assembly (B).

3. Remove cap screw (A). Remove brake disk.

4.

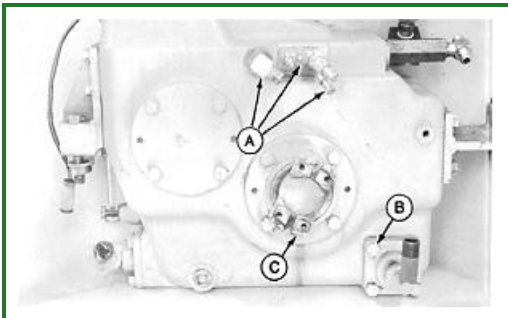


T7526JC-UN: Fittings, Output Flange And Cap Screws

Remove three fittings (A).

5. Remove output flange (C).

6. Remove cap screws (B). Remove cover, gasket, and strainer.


7.

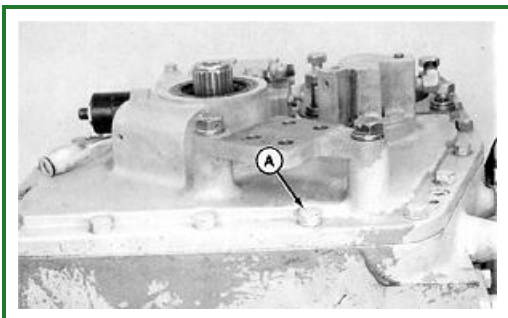

T7526JD-UN: Cover And Gasket Cap Screws

Remove 18 cap screws (A). Remove cover and gasket.

8.

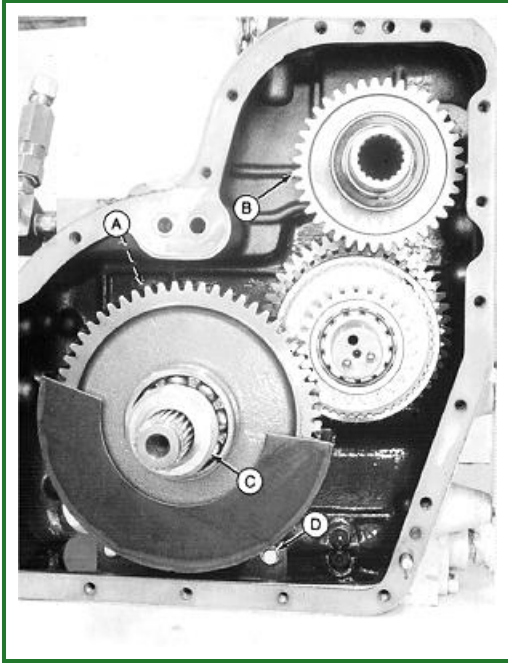

T7526JE-UN: Shims, Drive Gear, Ball & Spacer

LEGEND:

- A - Rear Shroud
- B - Input Gear
- C - Shims, Drive Gear, Ball, and Spacer
- D - Cap Screw (2 used)


Remove shims, drive gear, ball, and spacer (C).

9. Remove cap screws (D).

10. Remove input gear (B).

11. Remove rear shroud (A).

12.

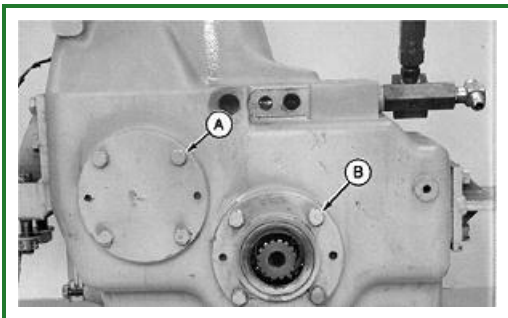

T7526JF-UN: Cap Screws

