

**OTHER MATERIAL**

Number	Name	Use
T43512 (TY9370*)	Thread Lock and Sealer (Medium Strength)	Seal axle set screw

\* Smaller Size

RX15009020,1 -19-12AUG92

**REMOVE SEAT AND AIR SUSPENSION**

1. Remove four suspension-to-seat base/storage box cap screws (A).
2. Disconnect the electrical connector behind the seat.
3. Remove seat assembly.




90  
15  
1

RW22671 -JUN-15JAN93

RX15499015,1 -19-24FEB93

**REMOVE SEAT FROM SUSPENSION**

1. Disconnect two electrical connectors (A) and cut the tie bands.
2. Remove screws (B) and (C) from each side of seat cushion base to swivel plate.

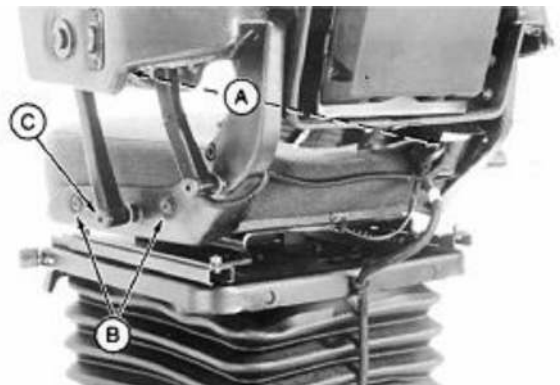


RW21179 -JUN-22JUL92

RX15009020,3 -19-12AUG92

## REMOVE SWIVEL PLATE

1. Remove two cap screws (A) from swivel plate to track left side and two cap screws (C) track to lateral shock plate right side.
2. Pull up on slide lever (B) and slide the swivel plate to the right and lift.

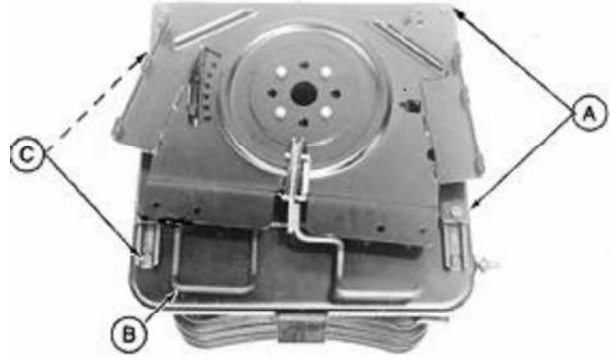

RX15009020,4 -19-12AUG92

RW21180 -UN-22JUL92