


Remove and Install Monitor Panel

1. Disconnect battery ground cable.
2. Remove bottom cover from under right hand console.

3.

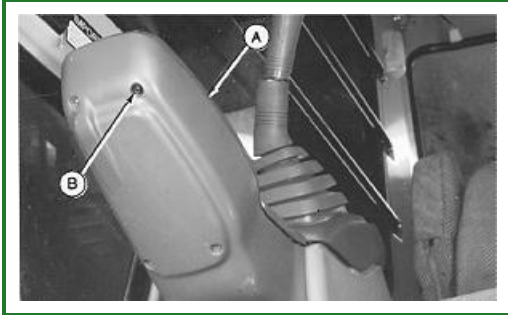

T7681CO-UN: Monitor Panel (Bottom View)

LEGEND:


A - Cover

B - Screws

Remove screws (B). Remove cover (A).

4. Remove screws. Turn cover (A) for access to cap screws.
5. Remove cap screws under control lever.
6. Remove monitor panel.

7.

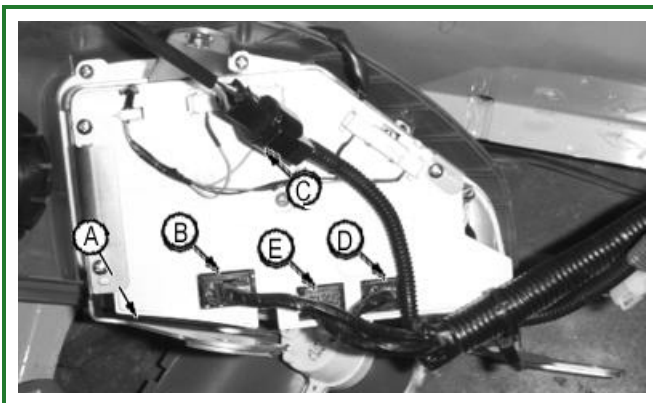

T105427B-UN: Monitor Panel Wiring Harness Connectors

LEGEND:

A - Screw (5 used)

B - Wiring Harness Connector

C - Wiring Harness Connector

D - Wiring Harness Connector

E - Wiring Harness Connector

Disconnect wiring harness connectors (B—E).

8. Install panel on bracket using screws (A).

9. Connect wiring harness connectors.
10. Install covers and boot.
11. Connect battery ground cable. Do engine speed recalibration. Do engine speed learning procedure.

TX,16,UU3987-19-19980919