



Remove and Install Accumulator

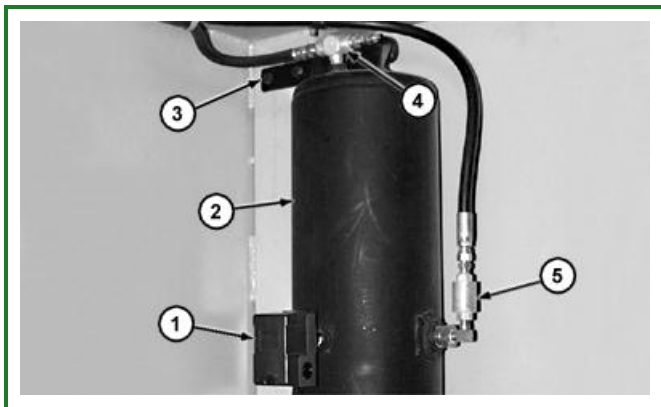

T126082-UN: Air Horn Accumulator

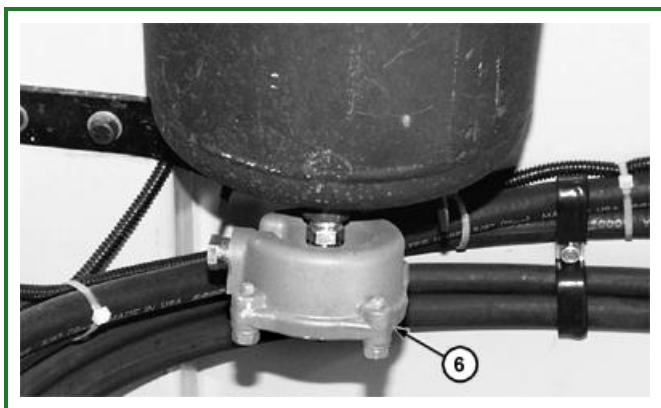

T126083-UN: Drain Valve

LEGEND:

- 1 - Pressure Switch
- 2 - Accumulator
- 3 - Bracket
- 4 - Pressure Relief Fitting
- 5 - Check Valve
- 6 - Drain Valve

1. Disconnect battery negative (-) terminal.
2. Release pressure from system.
3. Disconnect hoses.
4. Remove accumulator (2).
5. Remove or replace parts as needed.
6. Replace accumulator.
7. Connect hoses.
8. Connect battery, and pressurize system.

Remove and Install Check Valve



T126780-UN: Air Horn Check Valve

LEGEND:

- 1 - Air Hose
- 2 - Check Valve
- 3 - Elbow
- 4 - Accumulator

1. Disconnect battery negative (-) terminal.
2. Bleed pressure from system.
3. Disconnect air hose (1).
4. Disconnect check valve (2) from elbow (3).
5. Repair or replace parts as needed.
6. Install check valve.
7. Install air hose.
8. Connect battery and pressurize system.

Go to [Section_22:Group_2200](#)

CED,OUOE003,8613-19-1999/12/15