


## Remove Inner Roof Trim

1. Disconnect battery terminals (A) and (B).

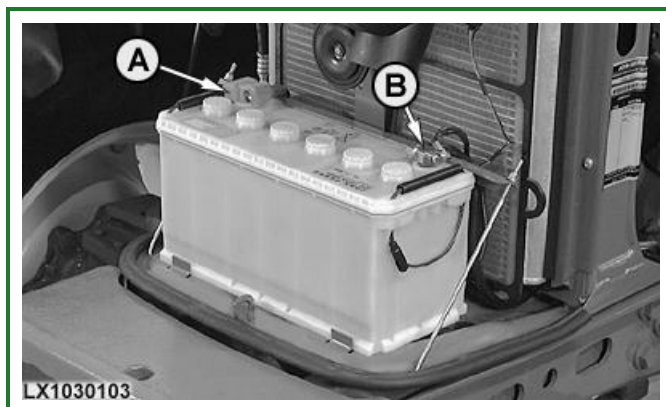

LX1030103-UN: Disconnect the battery.

**LEGEND:**

A - Positive terminal

B - Negative terminal


**⚠ CAUTION:**

*Disconnect the negative (—) terminal first. When reconnecting, do the positive terminal first. Always pay close attention to battery terminals.*

**⚠ CAUTION:**

*Comply with safety instructions on how to handle batteries. See Technical Manual, Section 05.*

2. *Inner roof trim without sun visor:*

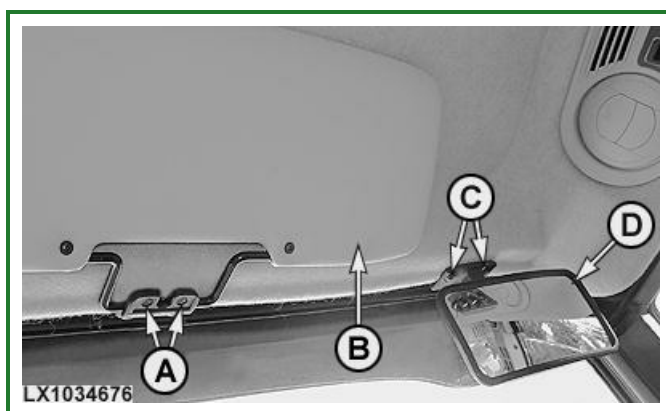

LX1034676-UN: Inner roof trim without sun visor

**LEGEND:**

A - Screw


B - Sun screen

C - Screw

D - Mirror

- Take out screws (A) and remove sun screen (B).
- Take out screws (C) and remove mirror (D).

3. **Inner roof trim with sun visor:**

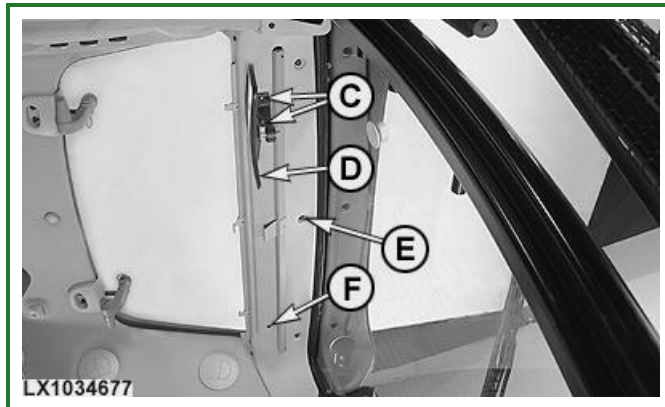


**LX1034677-UN: Inner roof trim with sun visor**

**LEGEND:**

- C - Screw
- D - Mirror
- E - Screw
- F - Screw

- Take out screws (C) and remove mirror (D).
- Take out screws (E) and (F) and remove trim panels.

4. Remove cover (A) and pull out the dome light plug.

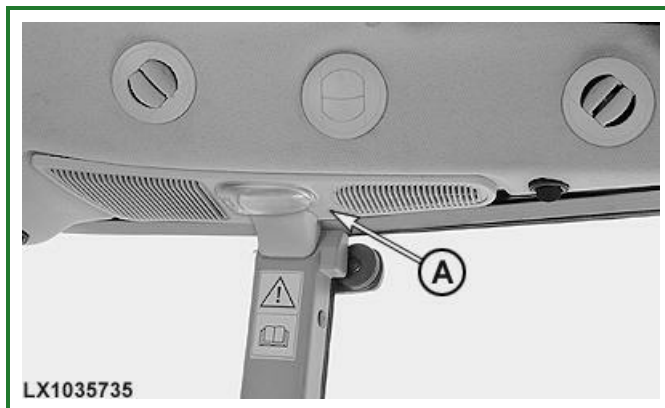

**LX1035735-UN: Removing the cover**

**LEGEND:**

- A - Cover

5. Remove the radio (if equipped).