

# Contents

## **SECTION 05—Safety**

Group 05—Safety Information

## **SECTION 10—General**

Group 05—Lubricants and Coolant

Group 10—Torques for Hardware

Group 15—Type Plates

Group 20—Serial Numbers

## **SECTION 20—Engine**

Group 05—Special Tools

Group 10—Engine on 2200 Series Combines

Group 15—Removing and Installing Engine

## **SECTION 30—Fuel, Air Intake and Cooling Systems**

Group 05—Fuel System

Group 10—Air Intake System

Group 15—Cooling System

## **SECTION 40—Electrical System**

Group 05—Connectors

Group 10—Alternator

Group 15—Starting Motor

Group 20—Main Electrical System

Group 25—Hillmaster Control

Group 26—Automatic Header Control (Lateral Tilt)

Group 30—Low Shaft-Speed Monitor System

Group 35—Harvest Performance Monitor

## **SECTION 50—Power Train**

Group 05—Intermediate Transmission

Group 10—Transmission and Differential

Group 15—Planetary Final Drives

Group 20—Final Drives

Group 25—Hydrostatic Drive, Variable Pump

Group 30—Hydrostatic Drive, Fixed-Displacement Motor

Group 35—Hydrostatic Drive, Oil Change

Group 40—Cam Lobe Motor

## **SECTION 60—Brakes, Steering, Rear Axle**

Group 05—Brake Operating Assembly

Group 10—Brakes

Group 15—Hydrostatic Steering

Group 20—Rear Axle

## **SECTION 70—Hydraulic System**

Group 05—Hydraulic Reservoir and Lines

Group 10—Triple Hydraulic Pump

Group 15—Electro-Magnetic Control Valve

Group 20—Hydraulic Cylinders

Group 21—Hillmaster Hydraulic Cylinder

Group 25—Accumulators

## **SECTION 80—Miscellaneous**

Group 05—Bearings and Shafts

Group 10—Drive Belts

Group 15—Drive Chains

Group 20—Side Guard

## **SECTION 90—Operator's Cab and Air Conditioning**

Group 05—Air Conditioning System - R134a

Group 10—Operator's Cab Heating System

Group 15—Gear Shift Mechanism

## **SECTION 110—Feeder House**

Group 05—Removing the Feeder House

Group 10—Bottom Feeder Drum

Group 15—Upper Feeder Shaft and Slip Clutch

Group 20—Drives

Group 25—Reverser

Group 30—Pivoting Shield

## **SECTION 120—Separator and Cleaning Unit**

Group 05—Stone Trap

Group 10—Threshing Cylinder and Concave

Group 15—Beater/Second Cylinder and Second Concave

Group 20—Electric Clutch

Group 25—Countershaft, L.h. Drive Belt Pulley and Belt Guide

Group 30—Variable Cylinder Drive

Group 35—Cylinder Drive and Reduction Gear

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM4594-19-27DEC00

COPYRIGHT© 1999  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual

- Group 40—Countershaft for Straw Walker and Cleaning Shoe Drive
- Group 45—Straw Walkers and Straw Walker Crankshaft
- Group 50—Cleaning Fan and Fan Drive

**SECTION 130—Grain Recovery and Unloading System**

- Group 05—Tailings Elevator
- Group 10—Clean Grain Elevator
- Group 15—Filling the Grain Tank
- Group 20—Unloading the Grain Tank
- Group 25—Unloading Auger

**SECTION 140—Special Equipment**

- Group 05—Straw Chopper
- Group 10—Chaff Spreader

**SECTION 210—General**

- Group 05—Specifications

**SECTION 220—Engine**

- Group 05—Specifications

**SECTION 230—Fuel, Air Intake and Cooling Systems**

- Group 05—Fuel System

**SECTION 240—Electrical System to Serial Number 068568**

- Group 05—General
- Group 06—Test Equipment
- Group 10—Functional Schematic and Harness Diagrams
- Group 15A—Current Supply/Starting Motor
- Group 15B—Cold Weather Starting Aid
- Group 15C—Engine Shut-Off Device
- Group 15E—Instruments
- Group 15F—Chopper Distributor Adjustment
- Group 15G—Windshield Wiper/Washer System
- Group 15H—Radio, Interior Lighting
- Group 15L—Cigarette Lighter, Seat Compressor
- Group 15M—Lighting System
- Group 15N—Flasher Functions
- Group 15O—Beacon Lights
- Group 15P—Fan, Air Conditioning System
- Group 15Q—Electrical Mirror Adjustment
- Group 15R—Work Lights
- Group 15S—Straw Warning Device
- Group 15T—Reel Speed Adjustment
- Group 15V—Separator, Header
- Group 15W—Infotrak Monitor
- Group 15X—Harvest Performance Monitor
- Group 15Y—Hillmaster Leveling System

- Group 15Z—Separator Adjustment
- Group 15AA—Separator Adjustment, Combine Data Center
- Group 15AB—Header Adjustments
- Group 15AC—Grain Tank Unloading System
- Group 15AD—Four-Wheel Drive
- Group 15AF—Header Float Control
- Group 15AG—Header Float Control
- Group 15AH—Header Float Control
- Group 20—ContourMaster System

**SECTION 241—Electrical System from Serial Number 068569**

- Group 05 —General
- Group 06—Test Equipment
- Group 10—Functional Schematic and Harness Diagrams
- Group 15A—Current Supply/Starting Motor
- Group 15B—Cold Weather Starting Aid
- Group 15C—Engine Shut-Off Device
- Group 15D—Fuse Tester
- Group 15E—Instruments
- Group 15F—Chopper Distributor Adjustment
- Group 15G—Windshield Wiper/Washer System
- Group 15H—Radio, Interior Lighting
- Group 15L—Cigarette Lighter, Seat Compressor
- Group 15M—Lighting System
- Group 15N—Flasher Functions
- Group 15O—Beacon Lights
- Group 15P—Fan, Air Conditioning System
- Group 15Q—Electrical Mirror Adjustment
- Group 15R—Work Lights
- Group 15S—Straw Warning Device
- Group 15T—Reel Speed Adjustment
- Group 15V—Separator, Header
- Group 15W—Infotrak Monitor
- Group 15X—Harvest Performance Monitor
- Group 15Y—Hillmaster Levelling System
- Group 15Z—Separator Adjustment
- Group 15AA—Separator Adjustment, Combine Data Center
- Group 15AB—Header Adjustments
- Group 15AC—Grain Tank Unloading System
- Group 15AD—Four-Wheel Drive
- Group 15AF—Header Float Control
- Group 15AG—Header Float Control
- Group 15AH—Header Float Control
- Group 20—ContourMaster System

**SECTION 250—Power Train**

- Group 05—Hydrostatic System
- Group 10—Testing Hydrostatic System
- Group 15—Inspect Parts Subject to Wear
- Group 20—Three-Speed Transmission

Continued on next page