


- Remove the C4 clutch piston (I) and C4 clutch drum (E), and the piston seal rings (G) and (H).

LX25601,0000449 -19-11MAY05-3/25

Assembling C4 clutch

- Inspect clutch piston and anti-cavitation check valves (A).

A—Anti-cavitation check valves

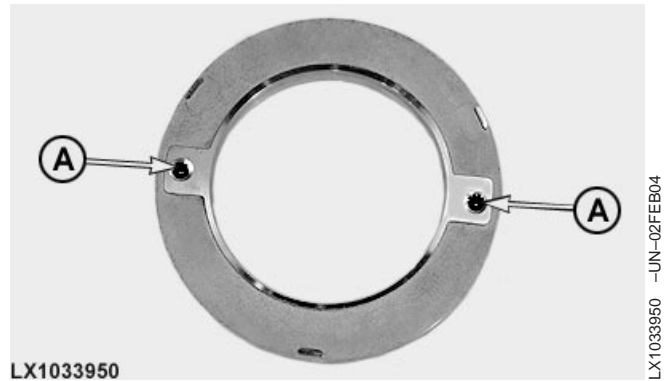


LX1033950

LX1033950 -UN-02FEB04

LX25601,0000449 -19-11MAY05-4/25

NOTE: The anti-cavitation check valve consists of retainer (A) and ball (B). The valve ball must not be jammed; it must move freely.

A—Retainer
B—Ball

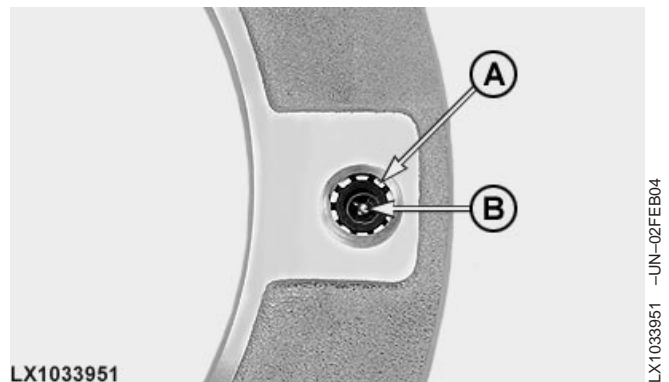

LX1033951

LX1033951 -UN-02FEB04

LX25601,0000449 -19-11MAY05-5/25

- Coat seal ring (A) with grease and install it in the piston groove.

NOTE: Position the seal ring in the ring groove so that it is not damaged when the piston is installed.

A—Seal ring



LX1033952

LX1033952 -UN-02FEB04

Continued on next page

LX25601,0000449 -19-11MAY05-6/25