


Disconnect bowden cables at levers (B), (C) and (D) at shift cover.

Remove bracket attaching nuts (A) from main frame.  
Remove bracket with bowden cables.

Disconnect park lock bowden cable (F) at range transmission.

On tractors with PowrQuad module, disconnect bowden cable (E).

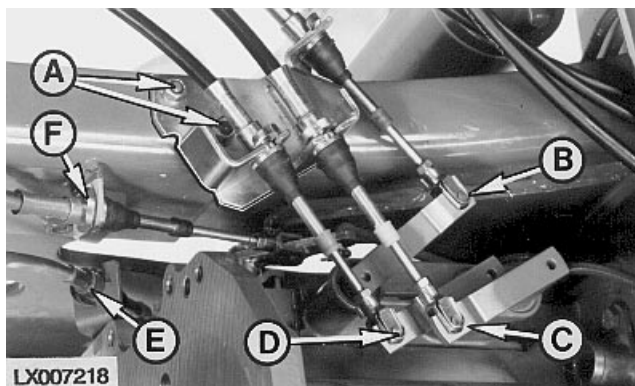

- A—Retaining nuts
- B—Ranges E<sup>1</sup> and F<sup>2</sup>
- C—Ranges A and B
- D—Ranges C and D
- E—Forward/reverse<sup>1</sup>
- F—Park lock bowden cable

<sup>1</sup>Tractors with PowrQuad module only

<sup>2</sup>Tractors with option transmission only

OULXBER,00007F8 -19-30MAR01-3/5


Remove shift cover (A) and take the special hex. socket screws out of the shifter forks.



OULXBER,00007F8 -19-30MAR01-4/5

Disconnect transmission wiring harness ground connection and install JDG19 (A) lifting eye at range transmission using a cap screw.

Install lifting tackle, then take out all the cap screws (B).  
Lift out the housing from the front.

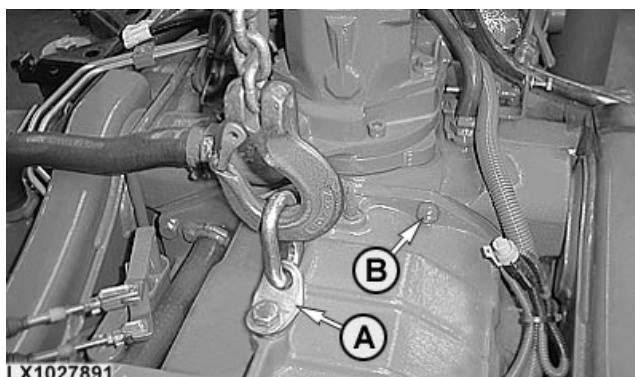

OULXBER,00007F8 -19-30MAR01-5/5