

AutoPowr/IVT transmission, input housing — Repairing (summary of references)

“Installing and removing the vibration damper”

“Removing the clutch control block”

“Repairing the clutch control block”

“Installing the clutch control block”

“Removing and installing the transmission oil filter”

“Removing the system pressure control block”

“Repairing the system pressure control block”

“Installing the system pressure control block”

“Removing the transmission oil pump”

“Repairing the transmission oil pump”

“Installing the transmission oil pump”

“Removing and installing the front plate”

“Replacing the hydrostatic speed sender (B62)”


53
10
4

LX25601,00002FD -19-01FEB02-1/1

Installing and removing the vibration damper

1. Loosen the fittings (A) and replace the vibration damper (B).
2. Tighten the fittings (A).

Specification	
Fitting, vibration damper—Torque.....	80 N•m 59 lb-ft

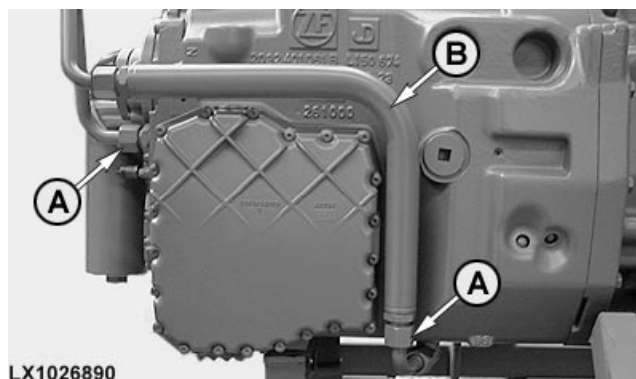

LX25601,0000308 -19-01FEB02-1/1