


Separating and Installing Fan

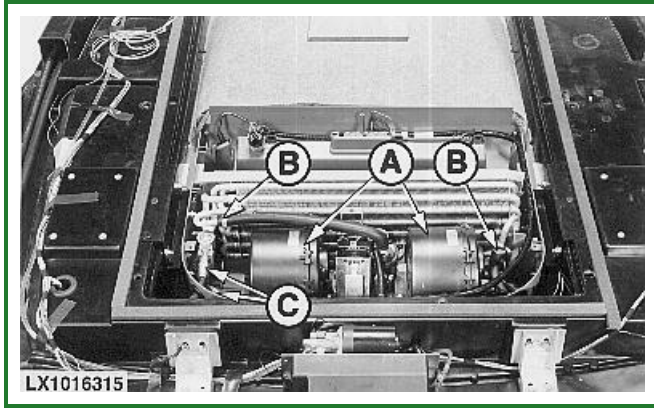


LX1016315-UN: Fan

1. Remove outer section of roof. [If equipped]
2. Remove cover of the heater/evaporator housing.
3. Disconnect and remove fan motors (A).
4. Empty cooling and air conditioning system.
5. Disconnect hot refrigerant hoses (B) and refrigerant lines (C) [Only tractors with the air conditioning] from radiator or expansion valve.

Go to [Section_90:Group_20](#)

YC00945,0000A5E-19-20160729

Separating and Installing Heater Regulator

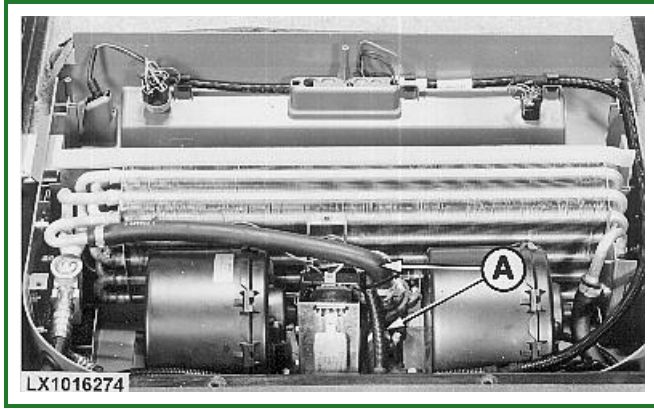

LX1016274-UN: Heater Regulator

1. Remove temperature control knob.
2. Remove cab air filter.
3. Remove outer section of roof. [If equipped]
4. Remove cover of the heater/evaporator housing.
5. Empty cooling system.
6. Disconnect heater hoses (A) from the heater regulator.
7. Remove heater regulator.

Go to [Section_90:Group_20](#)

YC00945,0000A5F-19-20160729