


Removing Heater Control Valve

1. Remove HVAC system access cover. (See [Access HVAC System](#) in section 90, group 20.)

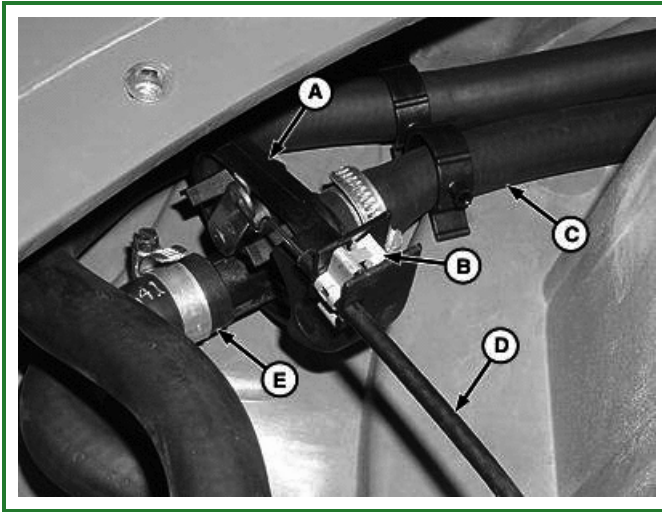

LV8837-UN: Removing Valve

LEGEND:

- A - Heater Control Valve
- B - Retaining Clip
- C - Heater Valve Inlet Hose
- D - Control Cable
- E - Heater Valve Outlet Hose

NOTE:

Avoid contamination, retain the coolant that come out of the heater core valve when disconnecting hoses.

2. Disconnect hydraulic hoses (C and E).
3. Remove retaining clip (B) and disconnect control cable (D).
4. Remove heater control valve (A) and perform valve leak test. (See [Heater Control Valve—Leak Test](#) in section 90, group 25.)

Go to [Section_90:Group_25](#)

LR35023,000050E-19-20180807

Heater Control Valve—Leak Test

1. Remove HVAC system access cover. (See [Access HVAC System](#) in section 90, group 20.)
2. Perform leakage test. (See Temperature Drop Test in Diagnostic Technical Manual in section 290, group 50.)

Go to [Section_90:Group_25](#)

LR35023,000050D-19-20180807