


## Adjust Heater Temperature Control Cable

1.

**NOTE:**


*Heater cable adjuster (A) is located in the evaporator/heater core housing, in the cab roof. Remove HVAC housing cover for adjustment.*

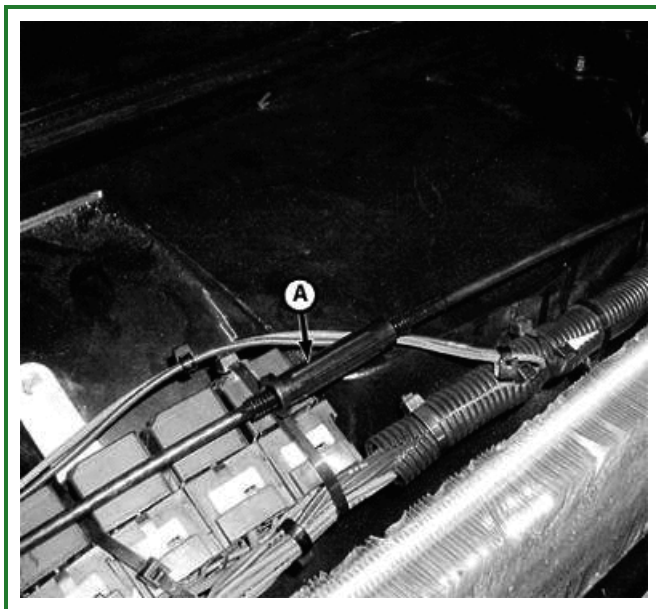

LV6673-UN: Heater Control Cable Adjust



LV6675-UN: Fully Open Position

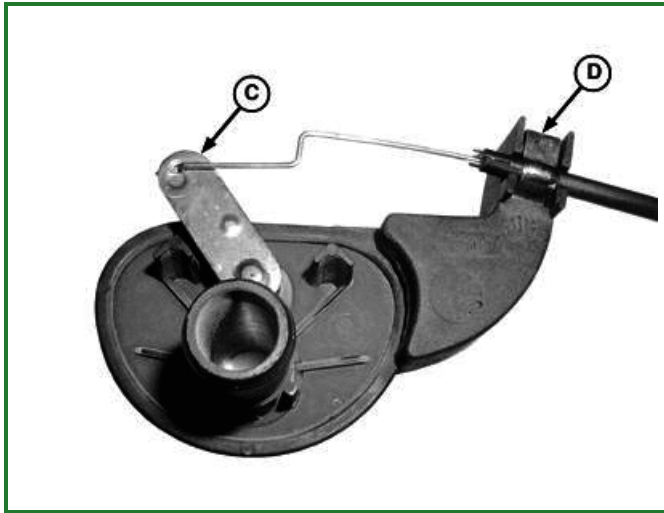

**LV8774-UN: Fully Closed Position**

**LEGEND:**

- A - Heater Cable Adjuster
- B - Heater Valve Arm—Fully Open Position
- C - Heater Valve Arm—Fully Closed Position
- D - Retainer Clip

Turn heater temperature control knob to full heat position (CW).

2. Adjust cable adjuster (A) until the heater valve arm is in fully open position (B).
3. Turn the heater temperature control knob to OFF (CCW). Heater valve arm should be in fully closed position (C). Adjust cable position with retainer clip (D), as required, and readjust cable with adjuster (A).

Go to [Section\\_290:Group\\_15](#)

RP90046,0000144-19-20100524