


CONSULT-II

CONSULT-II INSPECTION PROCEDURE


- 1. Turn ignition switch OFF.
- 2. Connect "CONSULT-II" to Data link connector.

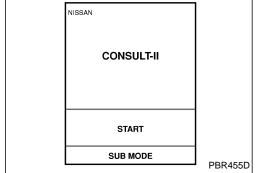

3. Insert NATS program card into CONSULT-II.

Program card NATS (AEN00A)

- 4. Turn ignition switch ON.
- 5. Touch "START".

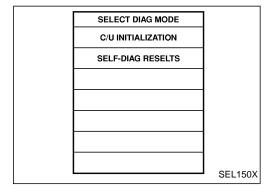

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual, NATS.

CONSULT-II DIAGNOSTIC TEST MODE FUNCTION

CONSULT-II DIAGNOSTIC TEST MODE	Description
C/U INITIALIZATION	When replacing any of the following components, C/U initialization is necessary. [NATS ignition key/IMMU/ECM/Dongle]
SELF-DIAGNOSTIC RESULTS	Detected items (screen terms) are as shown in the chart below.

NOTE:

When any initialisation is performed, all ID previously registered will be erased and all NATS ignition keys must be registered again.

The engine cannot be started with an unregistered key. In this case, the system may show "DIFFERENCE OF KEY" or "LOCK MODE" as a self-diagnostic result on the CONSULT-II screen. When initialisation is performed for RHD models for Europe, security indicator will flash six times to demonstrate recognition of dongle ID.