

PANEL REPLACEMENT

SIDE SILL PANEL REMOVAL



ZUA981270270B01

1. Remove the side sill panel.

Caution

- Avoid cutting with a blowtorch or similar tools as the insulator (shaded area) is flammable.

2. Remove the side sill reinforcement.

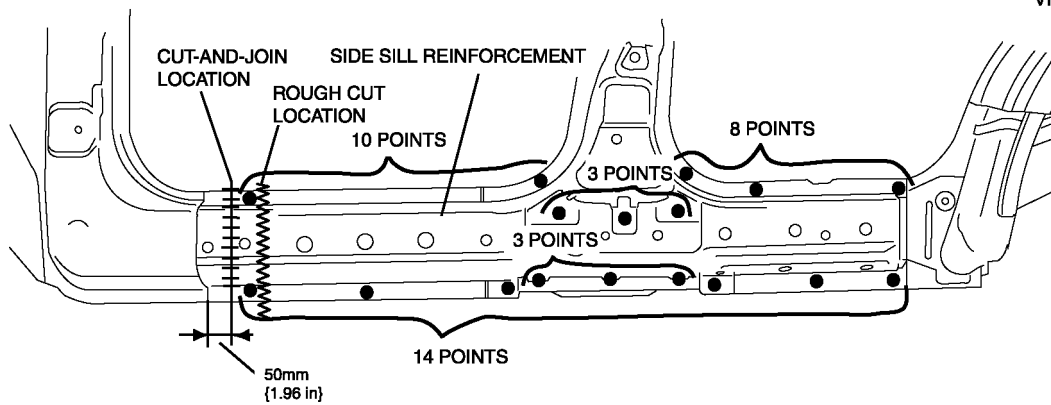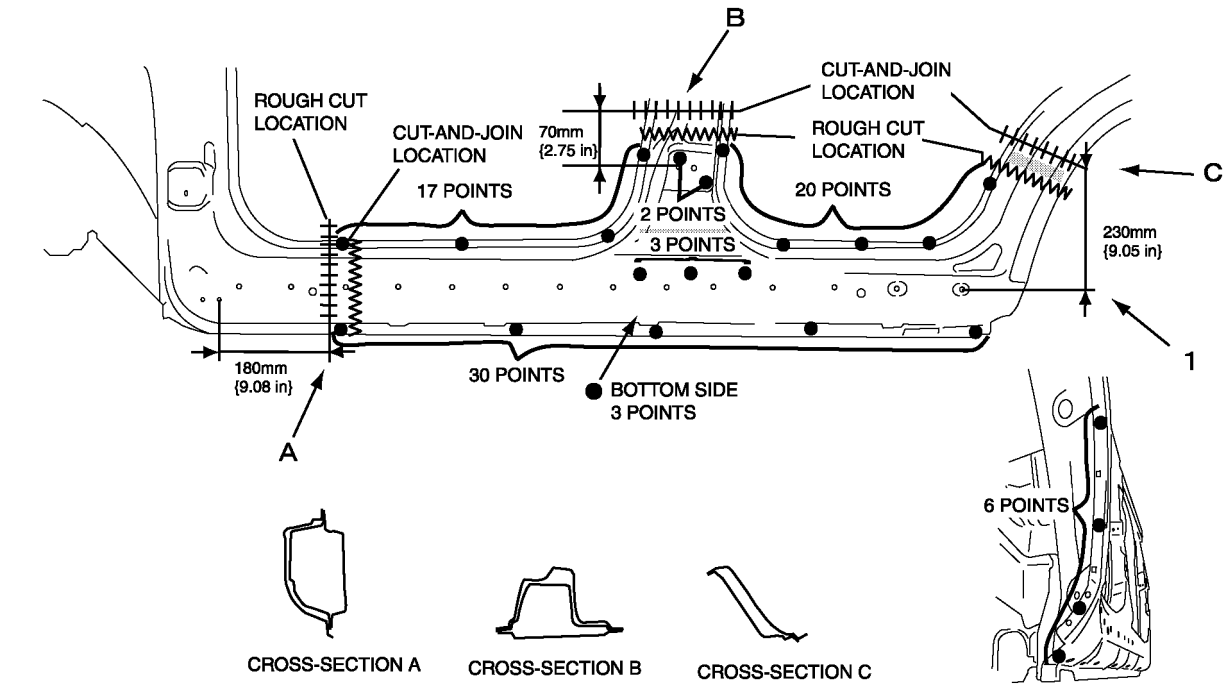

ZUA9812B023