

Air Cleaner - Remove and Install

SMCS - 1051-010

Removal Procedure

Start By:

- A. Remove the left side engine panel.

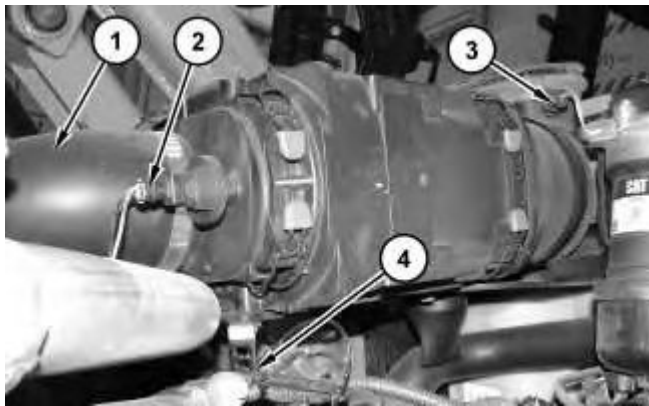


Illustration 1

g02975018

1. Disconnect hose (1). Disconnect harness assembly (2). Disconnect harness assembly (3) and clip (4) .
-

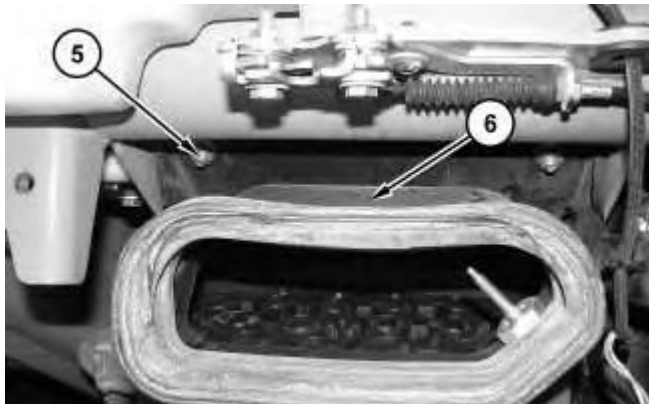


Illustration 2

g02975136

2. Remove bolts (5) and air cleaner (6) .

Installation Procedure

1. Install air cleaner (6) in reverse order of removal.
-