


SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000005961638

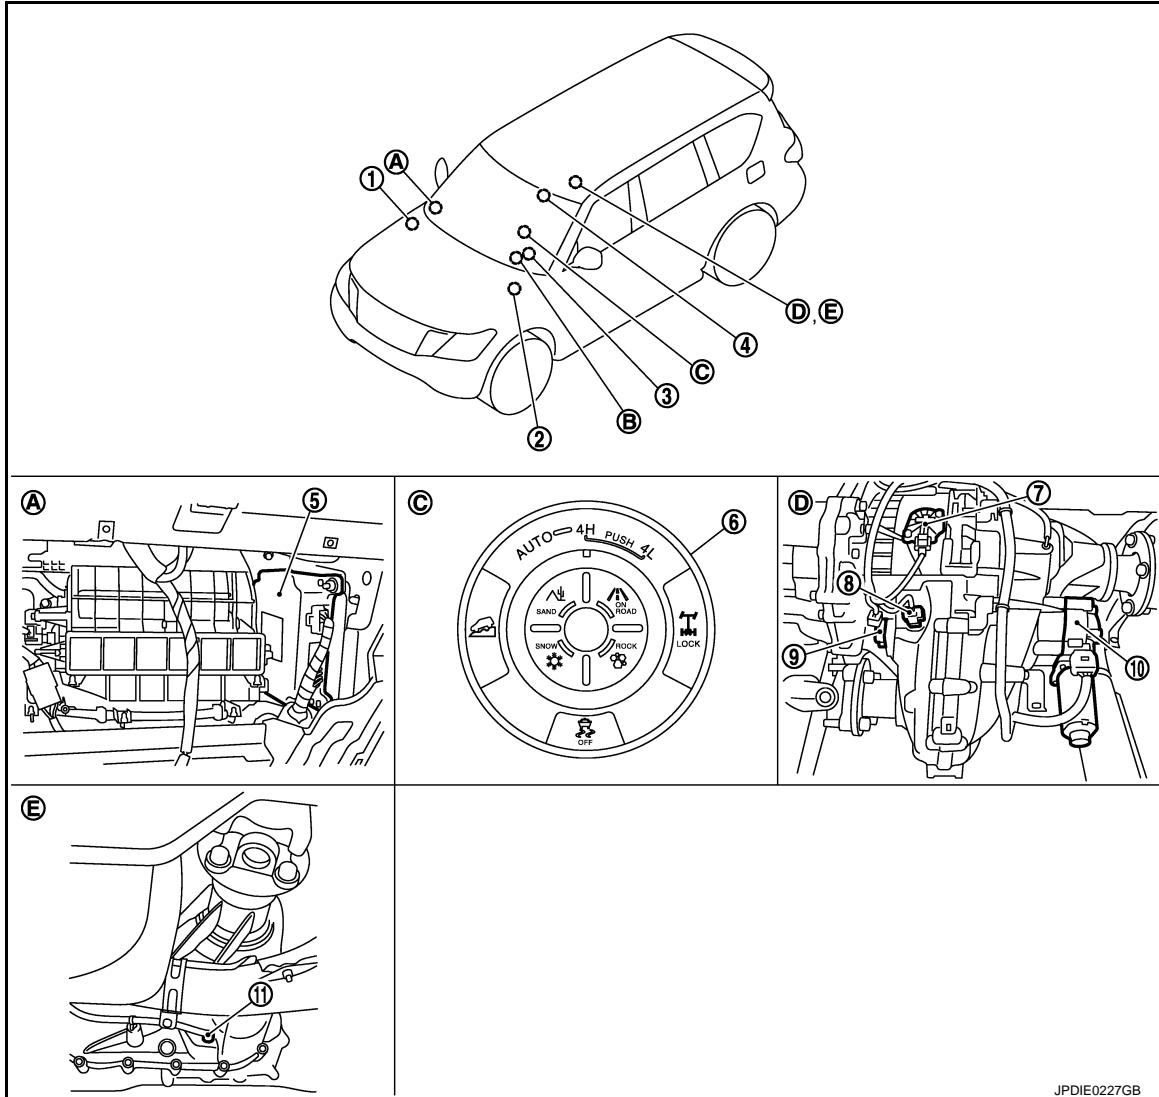

- | | | |
|--|--|---|
| <p>1. ECM
Refer to EC-25, "Component Parts Location" (VK56DE), EC-282, "Component Parts Location" [VK56VD (WITH EURO-OBD)], EC-716, "Component Parts Location" [VK56VD (WITHOUT EURO-OBD)]</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-10, "Component Parts Location".</p> | <p>3. Steering angle sensor
Refer to BRC-13, "Steering Angle Sensor".</p> |
| <p>4. TCM
Refer to TM-12, "A/T CONTROL SYSTEM : Component Parts Location" (RE5R05A), TM-234, "A/T CONTROL SYSTEM : Component Parts Location" (RE7R01B)</p> | <p>5. Transfer control unit</p> | <p>6. 4WD switch assembly</p> |
| <p>7. Transfer lock position sensor</p> | <p>8. Transfer Hi-Lo position sensor</p> | <p>9. Transfer rotary position sensor</p> |
| <p>10. Transfer control actuator</p> | <p>11. Transfer fluid temperature sensor</p> | |