


## Keep Radiator Screen Clean



LX1049786-UN: Pull out screen

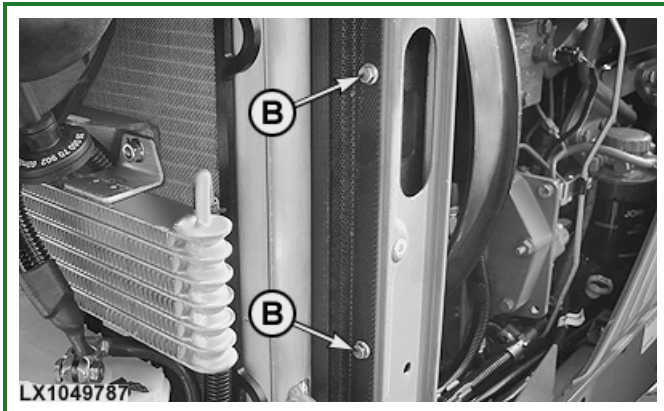

LX1049787-UN: Remove screws



LX1049788-UN: Condenser

For efficient cooling, the radiator screen must be kept clean.

1. Shut off engine and lift hood.
2. Remove and clean radiator screen (A).
3. Remove the two screws (B), lift off the slat and pull out condenser [ Tractors with air-conditioning system only.] (C). Clean the condenser and radiator.

### IMPORTANT:

Use of high-pressure washers or compressed air may cause the radiator fins to bend. Do not go too close. Carefully straighten any radiator fins that become bent.

## Check Coolant Level



**LX1047088-UN: Coolant level**

If coolant temperature is too high, rectify the cause (dirty radiator, clogged screen, coolant level too low).

Coolant level should be close to the max. mark. It must under no circumstances fall below the min. mark.

OU12401,0001CCB-19-20090914