




Replace Primary and Secondary Engine Air Filters

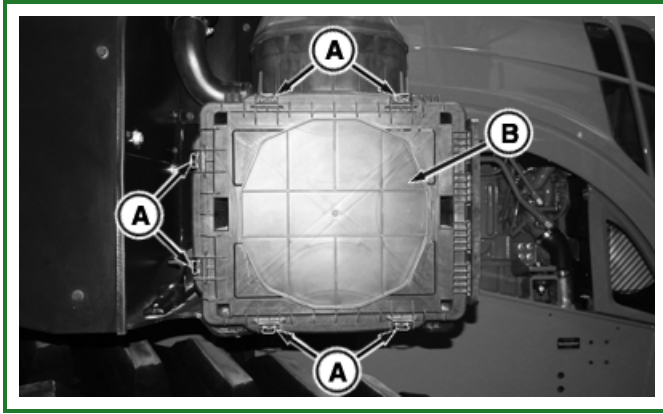

RXA0142024-UN: Filter Housing Cover

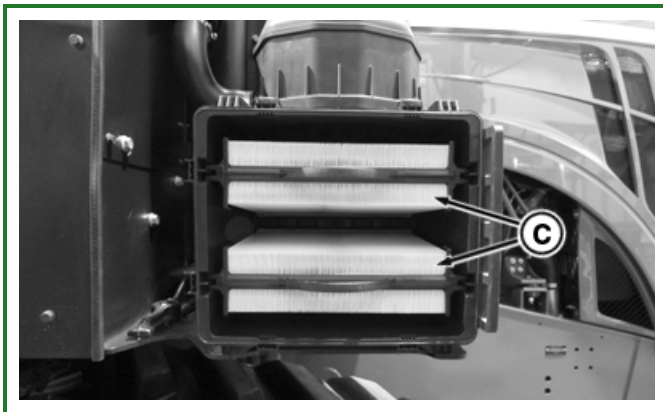

RXA0142025-UN: Primary Filters

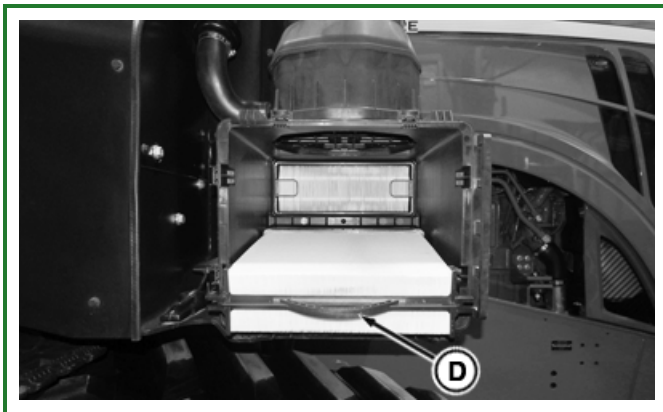

RXA0142026-UN: Remove Primary Filter

LEGEND:

- A - Cover Clips
- B - Cover
- C - Primary Filters
- D - Air Filter Handles

IMPORTANT:

Service interval may vary due to operating conditions. Replace secondary air filter every second primary air filter change.

Replace primary engine air filter if diagnostic trouble code remains ON.

IMPORTANT:

When Engine Air Filter Restriction Warning is activated engine performance will be reduced. Service engine air

When Engine Air Filter Restriction Warning is activated engine performance will be reduced. Service engine air filter immediately.


1. Unfasten four cover clips (A) to remove air filter cover (B).
2. Grasp air filter handle (D) to slide air cleaner forward and release from filter housing inlet.
3. Remove air filters (C) from filter housing.

IMPORTANT:


Do not attempt to clean engine air filters.

Replace secondary filter every other primary filter change.

Install new secondary filter immediately to prevent dust from entering air intake system.

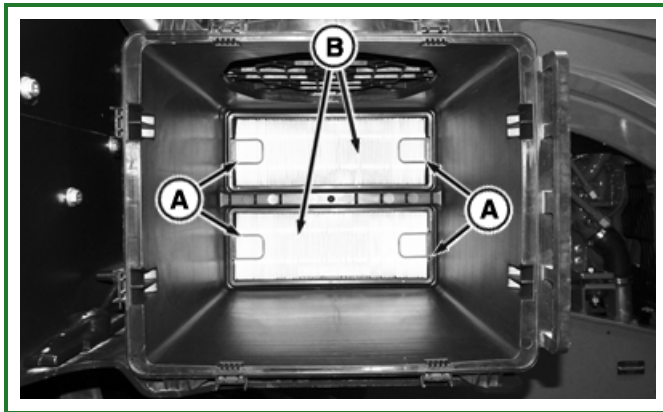

RXA0142027-UN: Secondary Filter

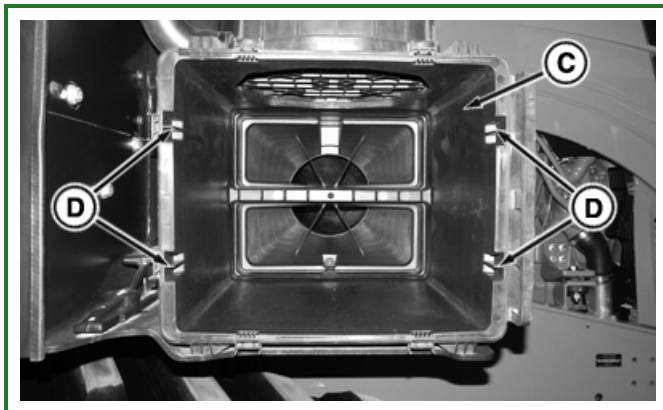

RXA0142028-UN: Filter Housing

LEGEND:

- A - Tabs
- B - Secondary Filters
- C - Filter Housing
- D - Primary Filter Slots

4. Pull on tabs (A) to remove secondary filters (B).
5. Clean debris and dirt from filter housing (C).
6. Replace air filters.