


Record Hydraulic Pump Serial Number

The upper hydraulic pump serial number plate is located on top of the upper hydraulic pump case.

The lower hydraulic pump serial number plate is located on the bottom of the lower hydraulic pump case.

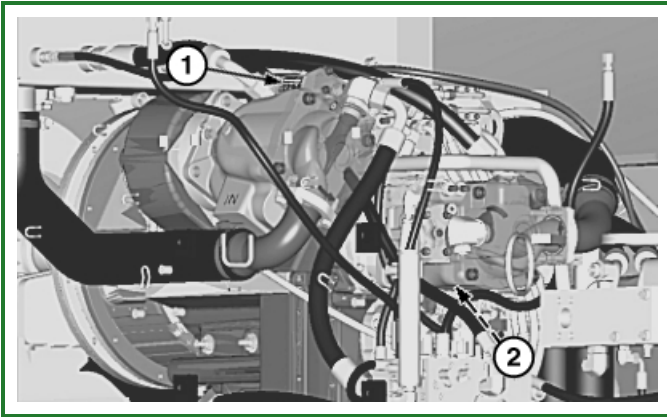

TX1048997A-UN: Hydraulic Pump Serial Number

LEGEND:

1 - Upper Hydraulic Pump Serial Number Plate

2 - Lower Hydraulic Pump Serial Number Plate

-: Hydraulic Pump Serial Number


Upper Hydraulic Pump Serial Number:

-: Hydraulic Pump Serial Number


Lower Hydraulic Pump Serial Number:

DP99999,0000216-19-20140725

Record Front and Rear Axle Housing Serial Numbers

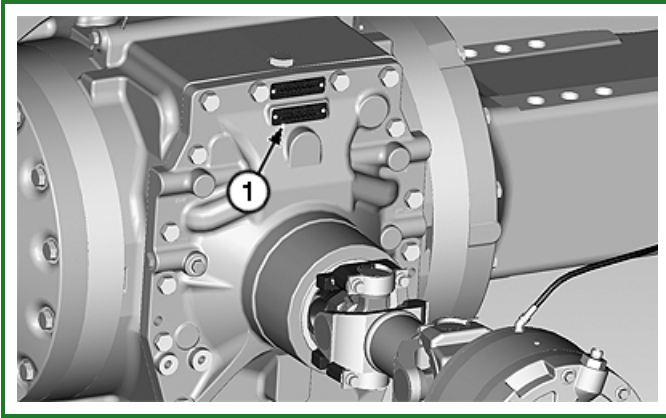

TX1078533A-UN: Front Axle

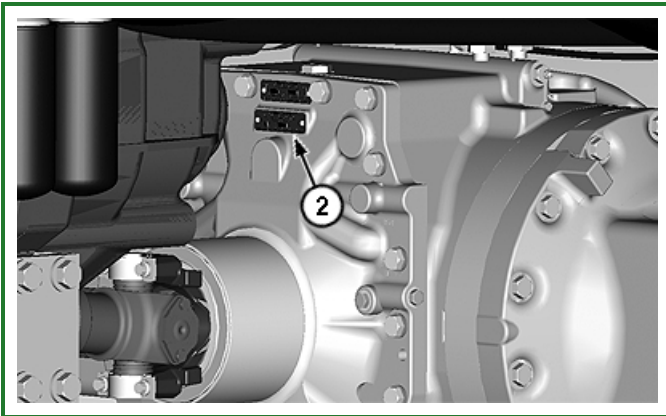

TX1078534A-UN: Rear Axle

LEGEND:

1 - Front Axle Serial Number Plate

2 - Rear Axle Serial Number Plate

-: Front Axle Housing Serial Number

Front Axle Housing Serial Number:

-: Rear Axle Housing Serial Number

Rear Axle Housing Serial Number:

The front axle serial number plate (1) is located on the back side of the front axle housing.

The rear axle serial number plate (2) is located on the front side of rear axle housing.

OUT4001,000060B-19-20100609