



Check Engine Oil Level

IMPORTANT:

Prevent engine damage. Do not run engine when oil level is below the ADD mark.

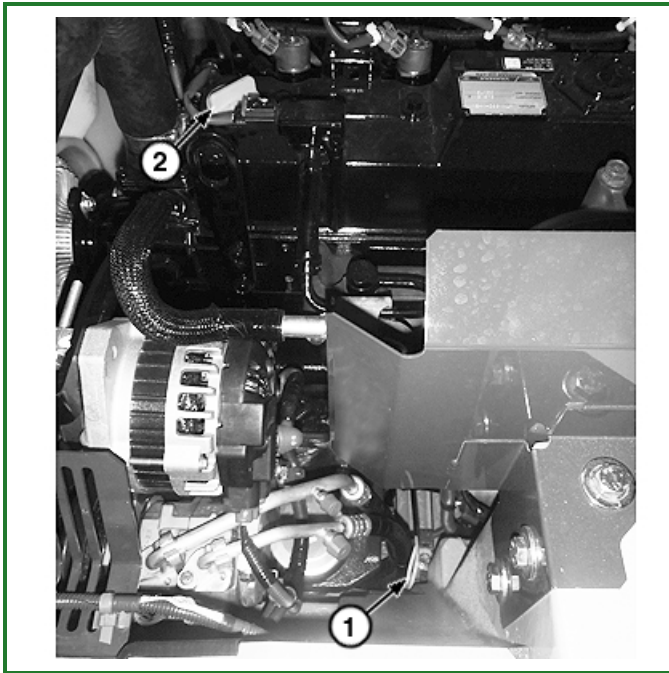

TX1129963A-UN: Oil Dipstick and Filler Cap

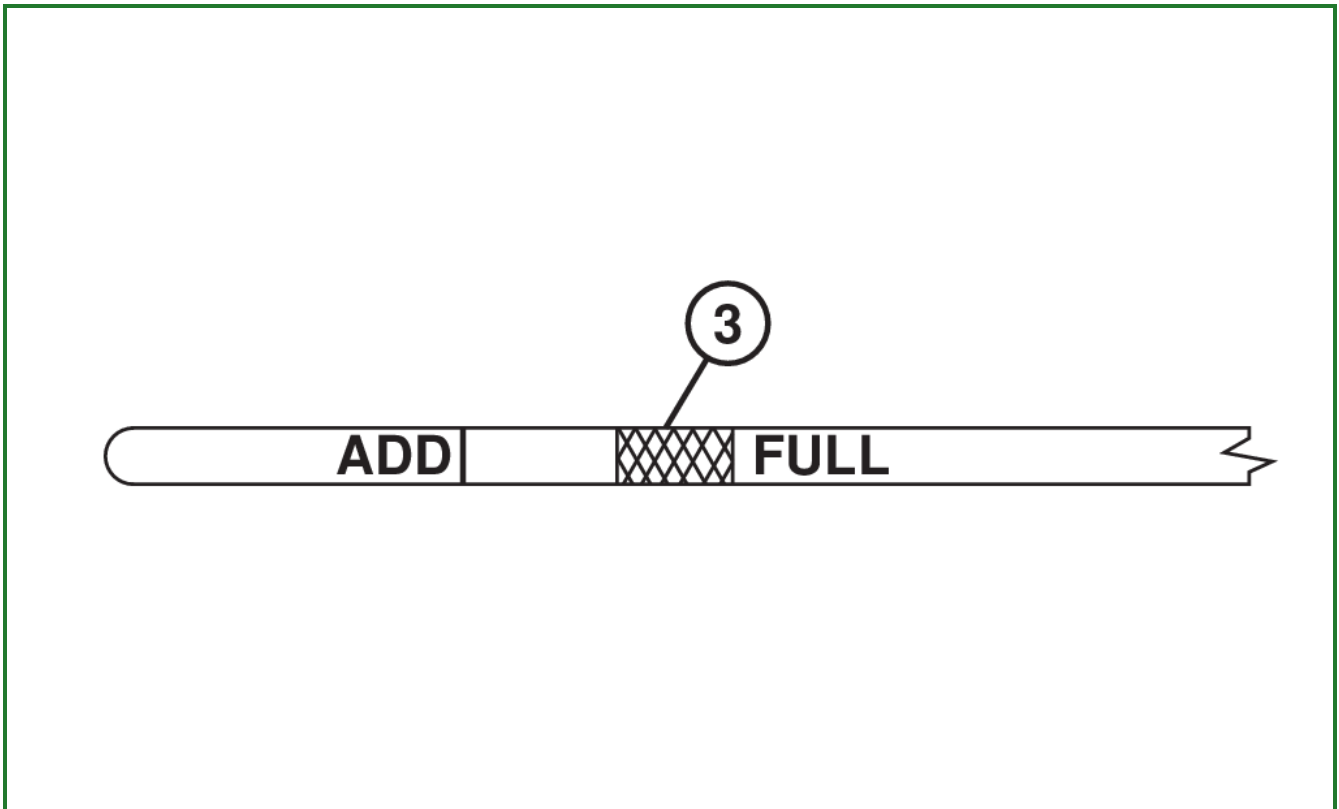

T216546-UN: Cross Hatch Area

LEGEND:

1 - Dipstick

2 - Filler Cap

3 - Cross Hatch Area

The most accurate oil level reading is obtained when the engine is cold; before starting the engine for the day's operation.

-
1. Park machine on level surface.
 2. Shut off engine and allow oil to drain into oil pan for 10 minutes.
 3. Open engine access door.
 4. Make sure dipstick (1) is fully seated.
 5. Remove dipstick to check oil level.

BEFORE THE ENGINE IS STARTED: The engine is full when oil level is in the cross hatch area (3). It is acceptable to run the engine when the oil level is above the ADD mark.

AFTER THE ENGINE HAS BEEN RUN: Allow the oil to drain into the oil pan for 10 minutes before checking the oil level. The engine oil level must be above the ADD mark after 10 minutes have passed.

6. **IMPORTANT:**

If oil level is low, the engine can be damaged. **DO NOT** operate the engine when oil level is below the ADD mark.

If oil level is below ADD mark, remove filler cap (2) and add oil as necessary. See Diesel Engine Oil. (Section 3-1.)

7. Install dipstick and close engine access door.

JS93577,000019A-19-20130314