



Replacing Bucket Teeth—TK Series

1. IMPORTANT:

Prevent machine damage. Check bucket teeth periodically so that wear does not extend to the bucket tooth shank.

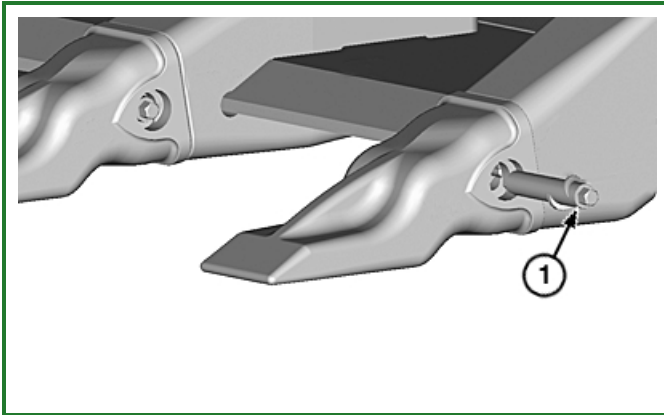

TX1150806-UN: Pin

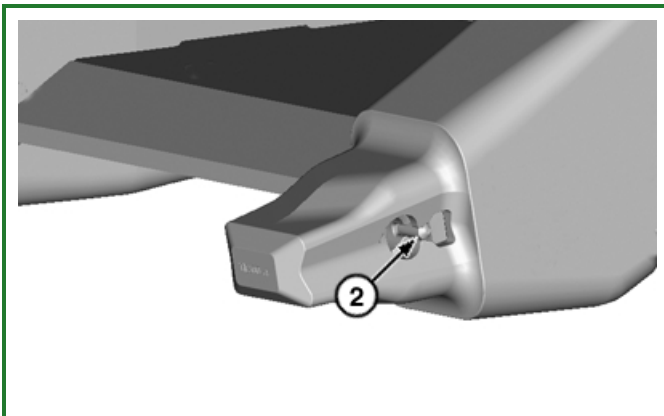

TX1150895-UN: Rubber Lock

LEGEND:

1 - Pin

2 - Rubber Lock (2 used)

Remove pin (1) by rotating counterclockwise 180° using a ratchet and socket.

2. Remove tooth.
3. Inspect pin and rubber locks (2) for damage. Replace if necessary.
4. Position the new tooth over the tooth shank.
5. Install pin by rotating clockwise 180°. Install pin in same orientation as removed. Check alignment of pin.

DB84312,00000BC-19-20181024

Removing the Bucket

1. Lower bucket to the ground.
2. Remove retainer cap screws and retainers.
3. Slide O-ring seals out of way. Remove bucket pins.
4. Install and adjust bucket to arm joist with proper shims as required.

CN93077,0000619-19-20150702