



REMOVAL OF ENGINE ASSEMBLY

56


1. **Radiator assembly.**
Remove the radiator assembly.
For details, see 13-2 REMOVAL OF RADIATOR ASSEMBLY.
2. **Fuel hose**
Disconnect fuel hose (1).

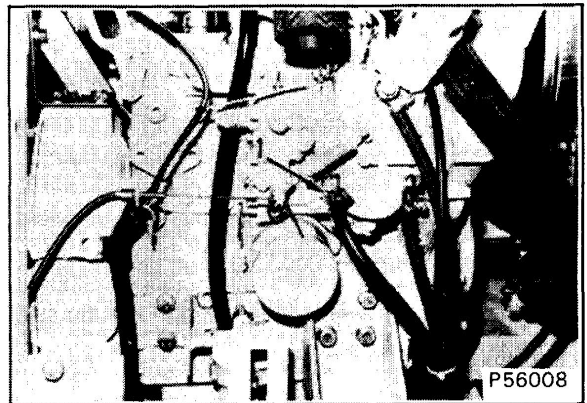

3. **Fuel control cable**
Loosen lock bolt (2) and disconnect fuel control cable (3).

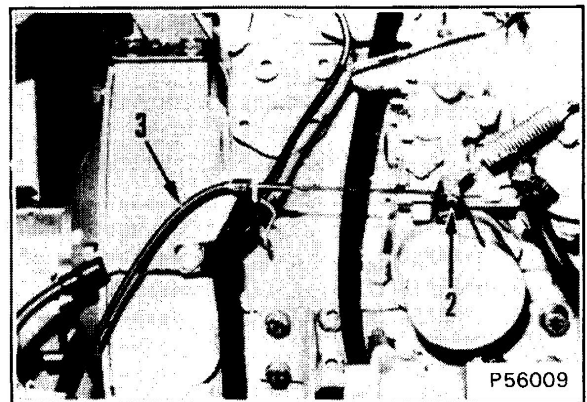

4. **Battery ground connection**
Disconnect battery ground connection (4).
5. **Alternator wire**
Disconnect alternator wire (5).

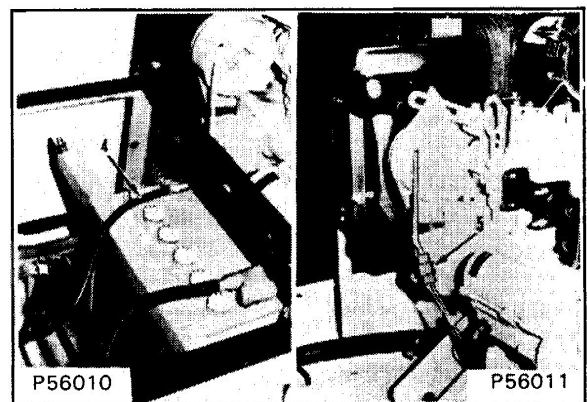

6. **Oil pressure switch wire**
Disconnect oil pressure switch wire (6).
7. **Water temperature switch wire**
Disconnect water temperature switch wire (7).

