


Air Conditioner Compressor Clutch Test

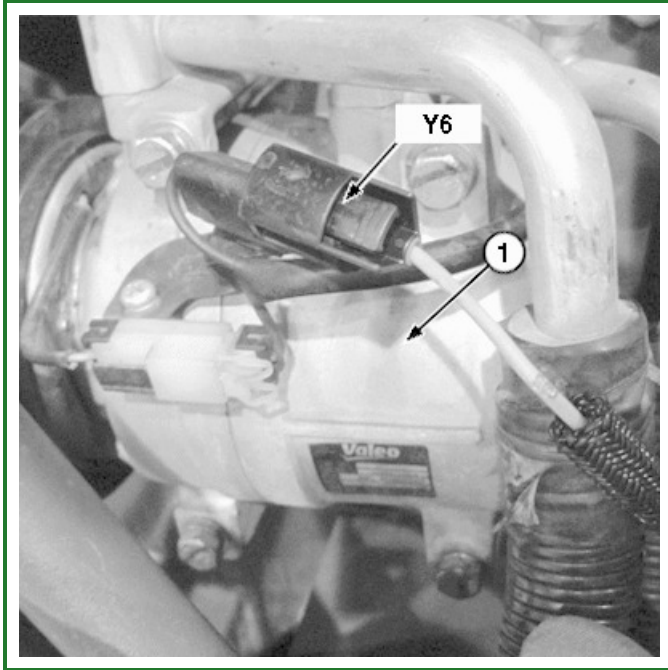

TX1071652A-UN: Air Conditioner Compressor

LEGEND:

1 - Air Conditioner Compressor


Y6 - Air Conditioner Compressor Clutch Connector

1. Disconnect air conditioner compressor clutch connector (Y6).
2. Connect positive (+) battery voltage to engage compressor clutch. Connect positive (+) voltage to air conditioner compressor clutch connector.
3. Air conditioner compressor clutch solenoid should engage. Listen for a “click” at the air compressor clutch.
4. If air conditioner compressor clutch does not “click” or engage, replace compressor. [See Compressor Remove and Install](#) . (Group 1830.)
5. If air conditioner compressor clutch “clicks” and engages, check wire harness. [See Middle Frame Harness \(W11\) Wiring Diagram](#) . (Group 9015-10.)

Go to [Section_9031:Group_25](#)

MM16284,0000E76-19-20100222

Air Conditioner Compressor Clutch Test

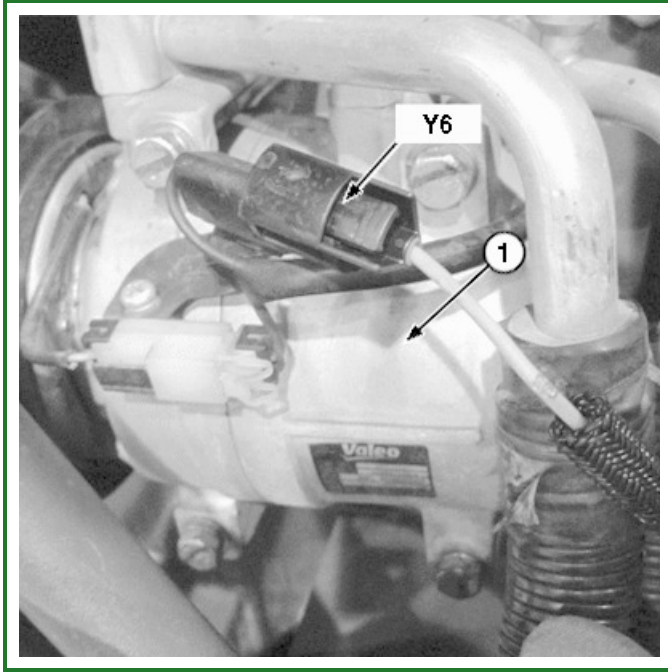

TX1071652A-UN: Air Conditioner Compressor

LEGEND:

1 - Air Conditioner Compressor

Y6 - Air Conditioner Compressor Clutch Connector

1. Disconnect air conditioner compressor clutch connector (Y6).
2. Connect positive (+) battery voltage to engage compressor clutch. Connect positive (+) voltage to air conditioner compressor clutch connector.
3. Air conditioner compressor clutch solenoid should engage. Listen for a “click” at the air compressor clutch.
4. If air conditioner compressor clutch does not “click” or engage, replace compressor. [See Compressor Remove and Install](#) . (Group 1830.)
5. If air conditioner compressor clutch “clicks” and engages, check wire harness. [See Middle Frame Harness \(W11\) Wiring Diagram](#) . (Group 9015-10.)

Go to [Section_9031:Group_25](#)

MM16284,0000E76-19-20100222