


Repair Cab Door Latch

1.



RXA0088381-UN: Latch Cover

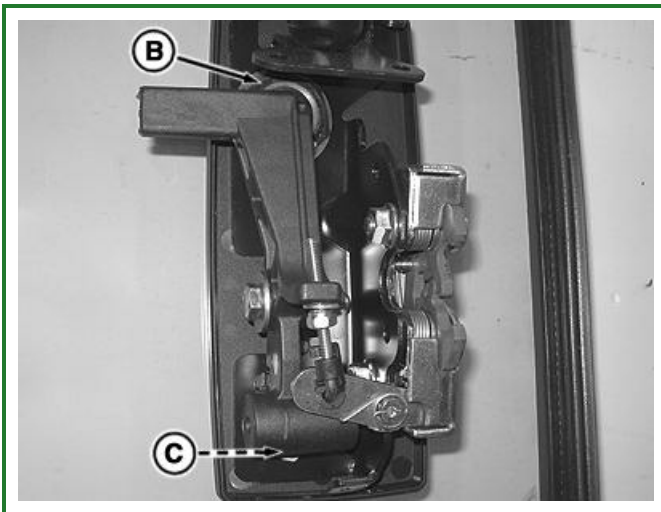

RXA0088384-UN: Cab Door Latch assembly

LEGEND:

- A - Latch Cover Screws (3 used)
- B - Outer Handle Nut
- C - Outer Handle Cap Screw


Remove and Install Outside Release Handle:

- Remove screws (A) and latch cover.
- Remove nut (B), cap screw (C), and outside handle.
- Inspect parts and replace as necessary.
- Install outer handle cap screw and nut. Tighten to specification.

Item	Measurement	Specification
Outer Handle Nut	Torque	35 N·m (26 lb.-ft.)
Outer Handle Cap Screw	Torque	10 N·m (96 lb.-in.)

- Adjust cab door. (See [Cab Door Adjustment—Step 3](#) in this group.)

2.

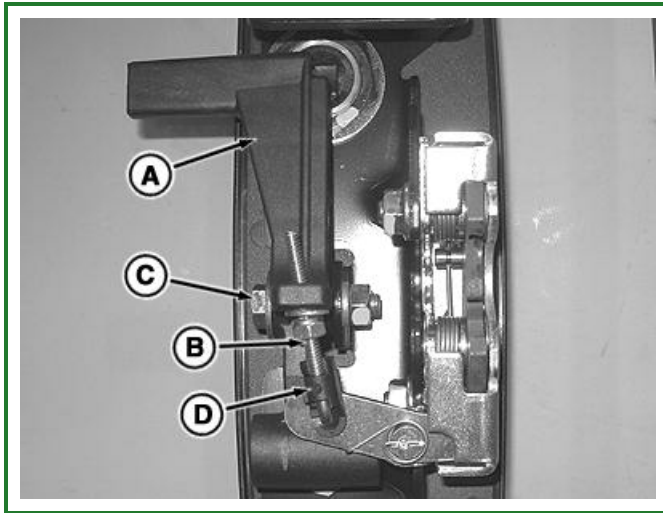

RXA0088401-UN: Inner Release Handle


LEGEND:

- A - Inner Release Handle
- B - Adjusting Rod
- C - Cap Screw and Nut
- D - Clip

Remove and Install Inner Release Handle:

- Remove clip (D) and adjusting rod (B), making sure to not drop washer.
- Remove cap screw and nut (C) and pull inner release handle (A).
- Install washer onto release adjusting rod (B) and install cap screw and nut (C) with head as shown in picture.
- Install in reverse order, and tighten cap screw and nut (C).
- Adjust cab door. (See [Cab Door Adjustment—Step 3](#) in this group.)

3.

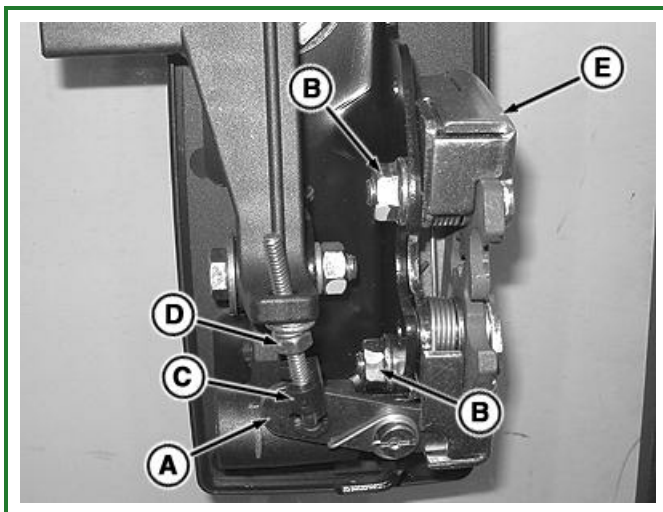

RXA0088402-UN: Latch Assembly

LEGEND:

- A - Latch Arm
- B - Latch Assembly Retaining Cap Screws and Nuts (2 used)
- C - Clip
- D - Adjustment Rod Nut and Washer
- E - Latch Assembly

Remove and Install Latch Assembly: