


Checking the Drawbar for Wear

IMPORTANT:

Parts that have reached or exceeded their wear limit must be replaced with new parts.

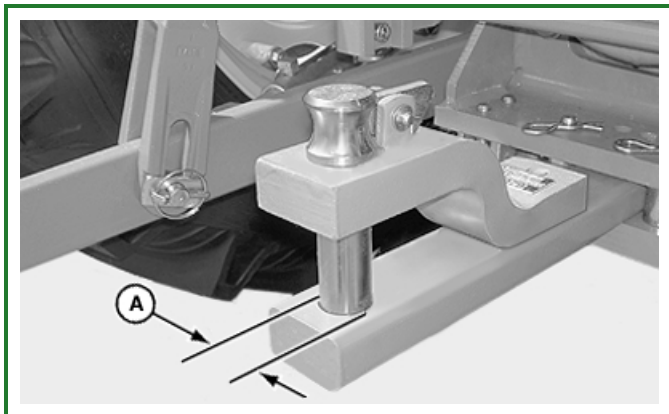


LV16099-UN: Check Drawbar Pin Wear

LEGEND:

A - Diameter of Pin

Check diameter (A) of drawbar pin.

Item	Measurement	Specification
Drawbar Pin Diameter (minimum)		29.5 mm (1.16 in.)

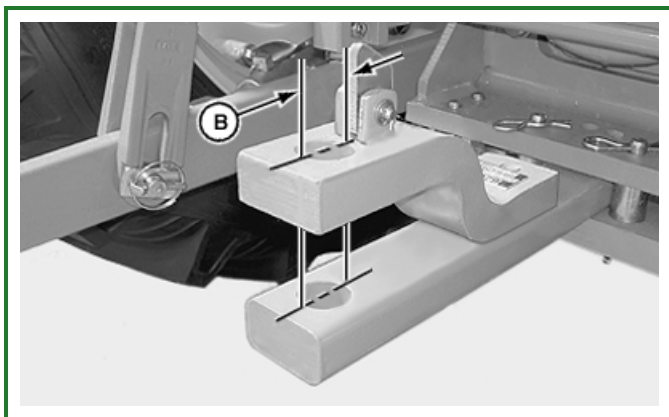

LV16100-UN: Check Drawbar Receiver Pin Hole Diameter

LEGEND:

B - Diameter of Receiver Pin Hole (2 used)


Check diameters (B) of both top and bottom drawbar receiver pin holes. Measure receiver holes in direction of travel.

Item	Measurement	Specification
Drawbar Receiver Pin Hole	Diameter (maximum)	35.0 mm (1.38 in.)

Go to [Section_80:Group_10](#)

DP51502,000187D-19-20140318

Proper Use of Drawbar

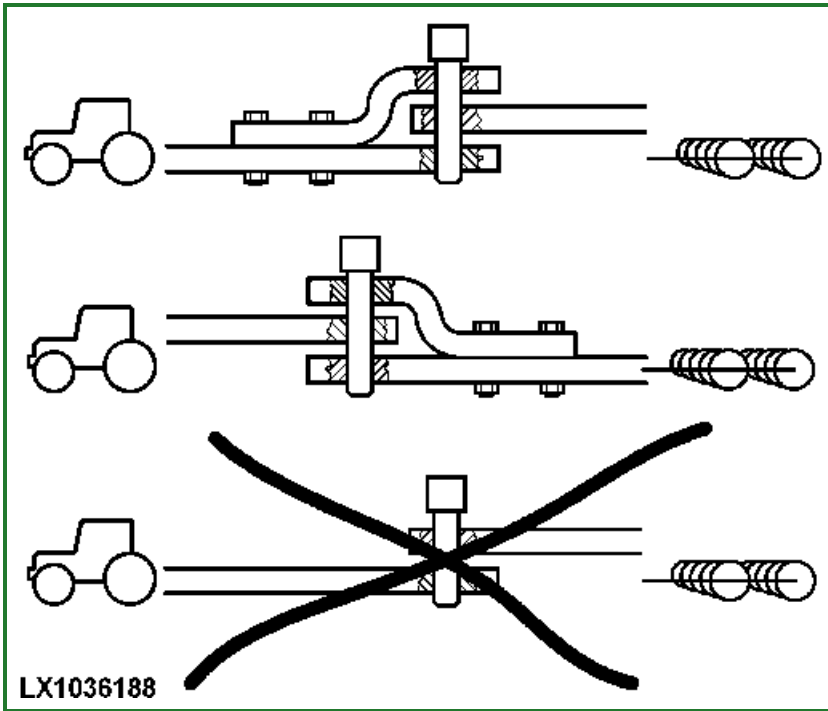

LX1036188-UN: Proper Use of Drawbar

IMPORTANT:

Comply with local traffic regulations when using the drawbar. Use suitable, approved hitch pins only. Combine drawbars as shown only.

[Go to Section_80:Group_10](#)

DP51502,0001880-19-20140318