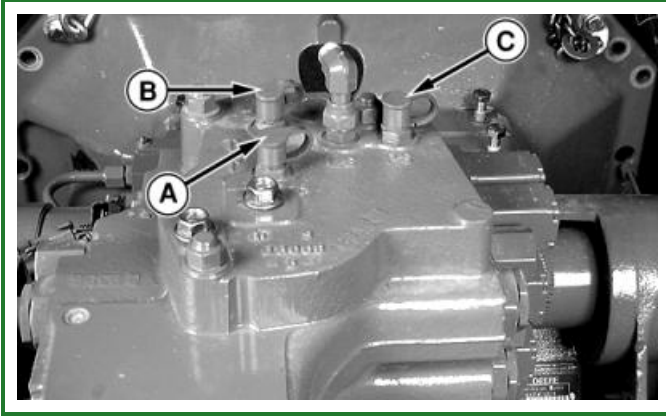
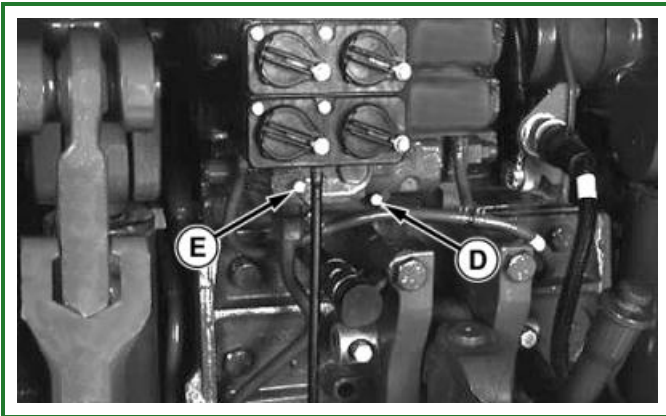


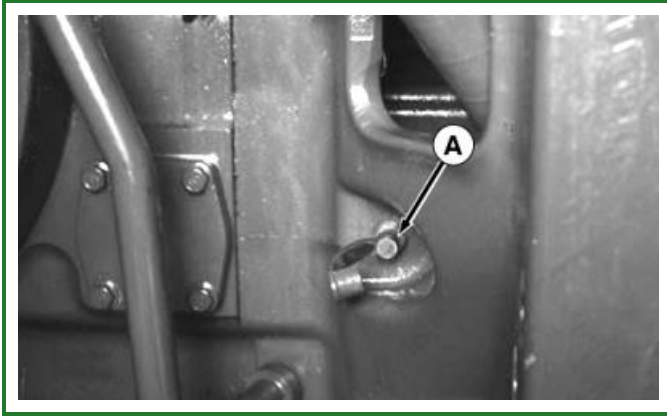
DR Locations**RW30491-UN: DR Locations****RW30493-UN: DR Locations****LEGEND:**

- A - Return Oil Pressure
- B - Secondary Pump Pressure
- C - Pilot Oil and Transmission Control Pressure
- D - Secondary Pump Load Sense Pressure
- E - Hitch Work Port Pressure

1. Return Oil Pressure DR (A) is located on top of the SCV stack marked "T".
2. Secondary Pump Pressure DR (B) is located on top of the SCV stack marked "P".
3. Pilot Oil and Transmission Control Pressure DR (C) is located on top of the SCV stack, marked "PS".
4. Secondary Pump Load Sense Pressure DR (D) is located beneath the hitch valve on the rear side of the differential case.
5. Hitch Work Port Pressure DR (E) is located on the rear side of the hitch valve.

Specification: 200 bar (2900 psi)

6.

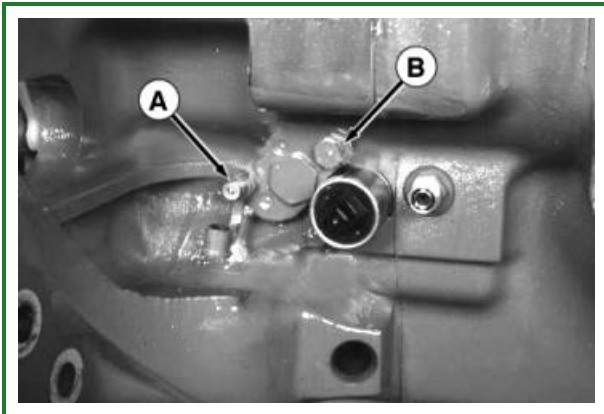
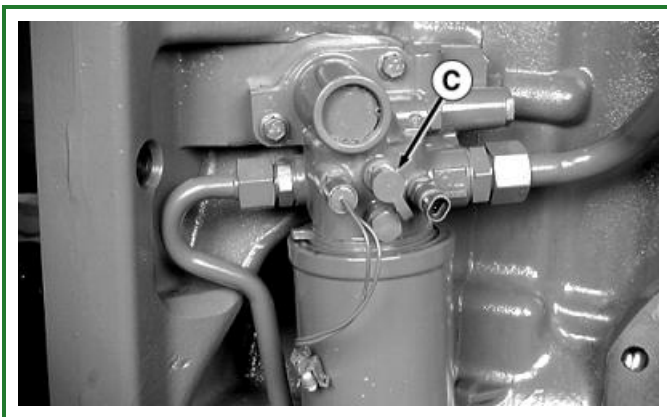
**RW30492-UN: Rear Axle Lube**

Pump Drive Housing (Rear axle lube) Pressure DR (A) is located on the lower right side of the pump drive housing.

Specification: 1 bar (14.5 psi)

Typical Pressure: 7 kPa (1.0 psi) at 2000 rpm

7.

**RW30494-UN: PRO Clutch/Brake DR****RW30498-UN: Hydraulic Filter Outlet DR****LEGEND:**

A - PTO Clutch DR

B - PTO Brake DR

C - Hydraulic Filter Outlet DR

The PTO Clutch Pressure DR (A) is located on the lower left side of the differential case.