


Grill Removal and Installation

Removal:

1. Raise hood and support on prop rod.
- 2.

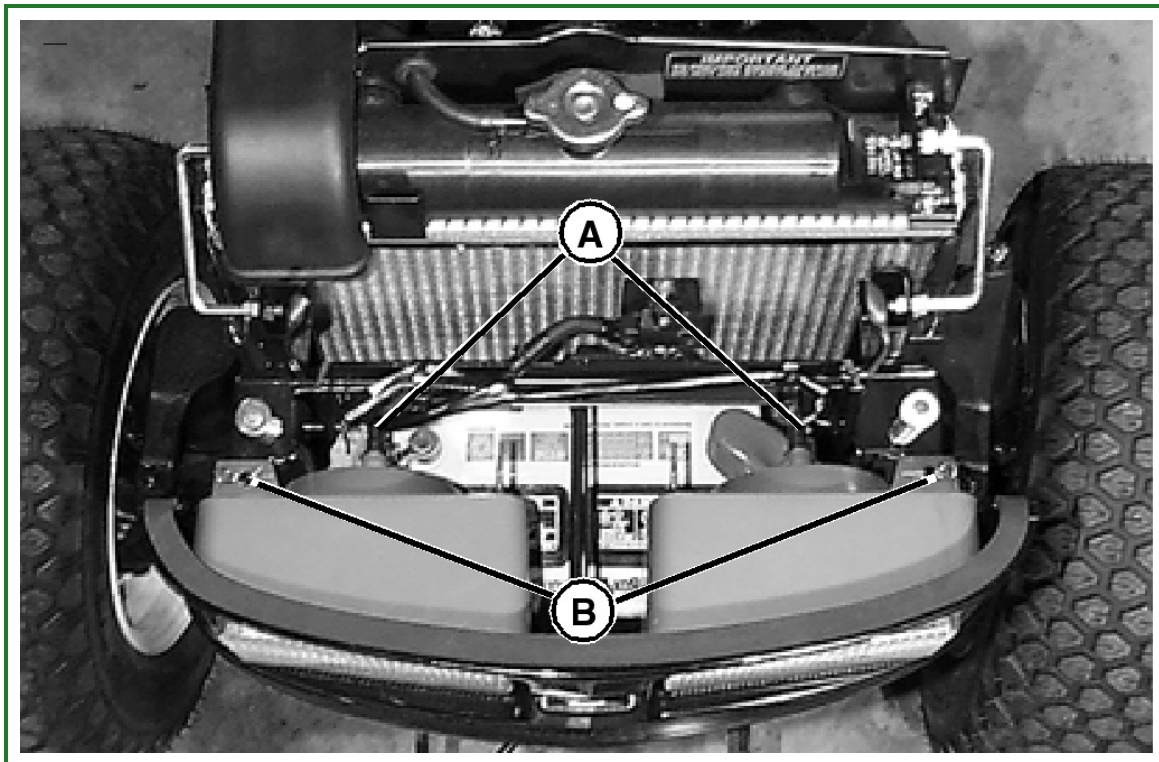

Disconnect the headlight connectors (A).

3. Remove the hair pins (B) from the locating pins.
4. Pull the upper locating tabs on the top of the grill from the locating pins, and remove the grill.


Installation:

1. Insert the locating tabs on the bottom of the grill into the slots in the machine frame.
2. Pull up on the upper locating tabs and install the tabs to the locating pins.
3. Connect the headlights.
4. Install the hair pins to the locating pins.
5. Lower the hood.

200105161457722-19-200608071336

Hood Removal and Installation

1. Raise and support the hood on the prop rod.

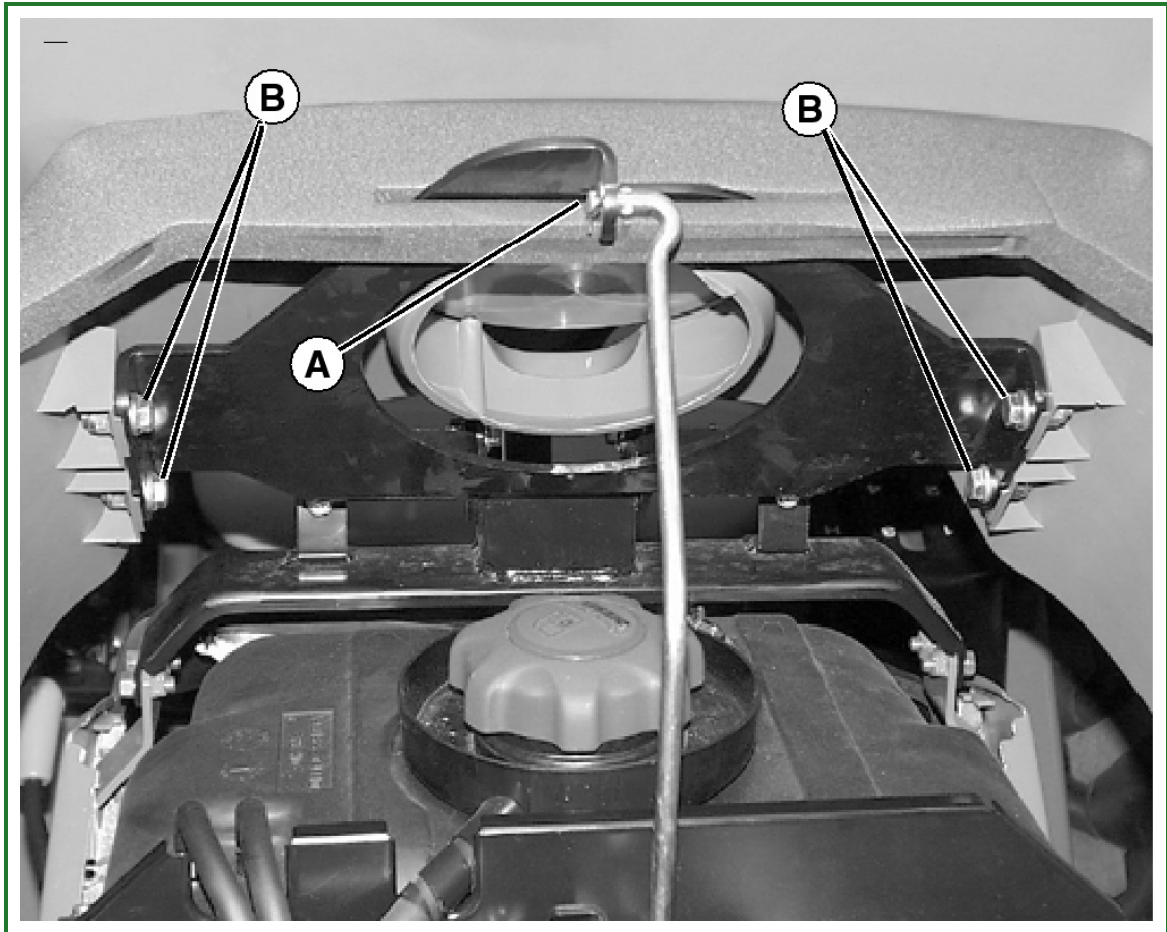

2. Have an assistant hold the hood.
3. Remove the spring cotter (A) and disconnect the prop rod.
4. Remove the four cap screws and nuts (B) from the hood bracket.
5. Remove the hood.

Installation:

Installation is the reverse of removal.

200105161458727-19-200608071336