


Remove Heater Control Valve

1.

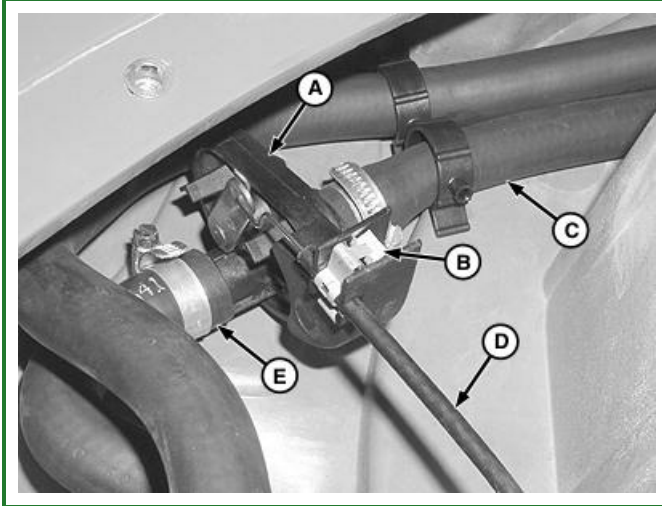

LV8837-UN: Heater Control Valve

LEGEND:

- A - Heater Control Valve
- B - Clip
- C - Heater Valve Inlet Hose
- D - Control Cable
- E - Heater Valve Outlet Hose

Remove HVAC access cover. (See Remove and Install HVAC Housing Cover in Section 90, Group 20.)

2.

NOTE:

A small amount of coolant will leak out of valve and heater core.

Disconnect hoses (C and E).

3. Remove clip (B) and disconnect control cable (D).

4. Remove heater control valve (A) and test for leakage (See Leak Test Heater Control Valve in Section 90, Group 25.)

Go to [Section_90:Group_25](#)

JG31785,00003D7-19-20050208

Leak Test Heater Control Valve

1. Connect water pressure hose to control valve inlet and turn the valve arm to closed position.
2. Turn water pressure on and check for leakage from the valve outlet.

3.

NOTE:

The heater control valve is not serviceable.

Replace valve as required.

Go to [Section_90:Group_25](#)

JG31785,00003D8-19-20050208