


## Reference 290-15-007, Adjust Heater Temperature Control Cable


1.

**NOTE:**


*Heater cable adjuster (A) is located in the evaporator/heater core housing, in the cab roof. Remove HVAC housing cover for adjustment.*

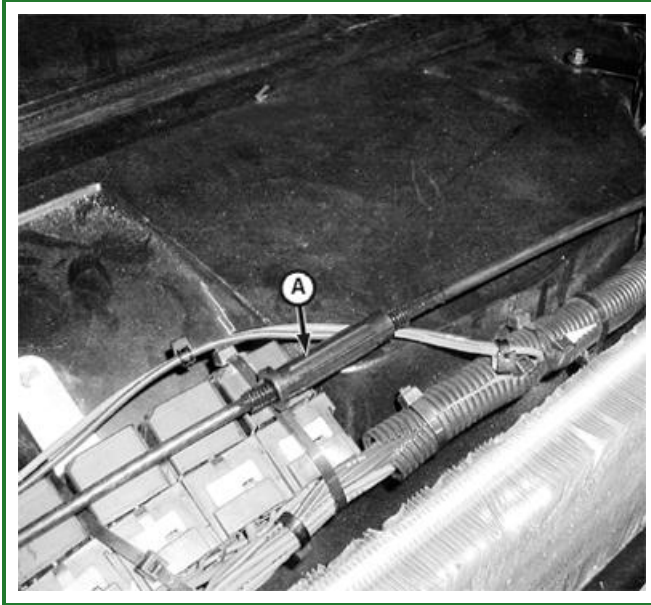

**LV6673-UN: Heater Control Cable Adjust**

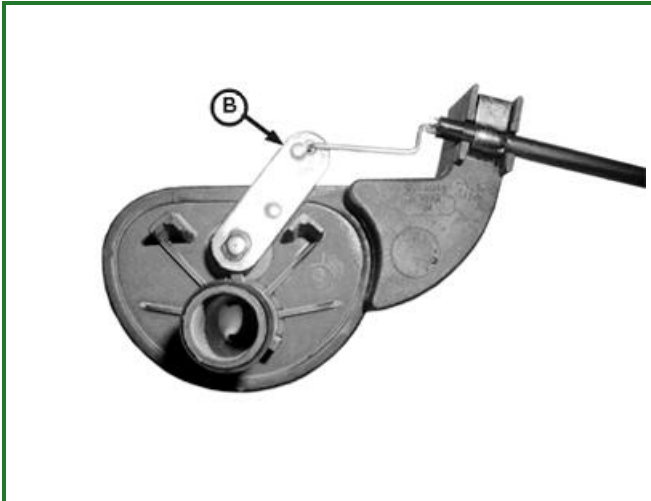

**LV6675-UN: Full Open Position**

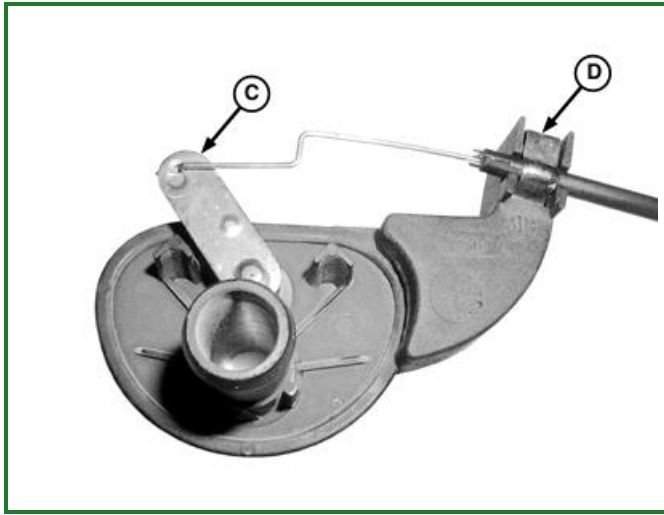

**LV8774-UN: Full Closed Position**

**LEGEND:**

- A - Heater Cable Adjuster
- B - Heater Valve Arm—Full Open Position
- C - Heater Valve Arm—Full Closed Position
- D - Retainer Clip

Turn the heater temperature control knob (CW) to full heat position.

2. Adjust cable adjuster (A) until the heater valve arm is in the full open position (B).
3. Turn the heater temperature control knob to OFF (CCW). Heater valve arm should be in the full closed position (C). Adjust cable position with retainer clip (D), as required, and readjust cable with adjuster (A).

Go to [Section\\_290:Group\\_15](#)

OUC1082,000057D-19-20050224