

Rockshaft Sensitivity Adjustment

Reason:

To make sure that the rockshaft control valve sensitivity is set correctly.

Equipment:

Ballast

Box.....BW13586


Sensitivity

Adjustment

Procedure:

1. Open rockshaft speed control valve completely.
2. Set engine speed at fast idle.
3. Put position operator control lever so that weight is suspended approximately midway in operating range.

4.

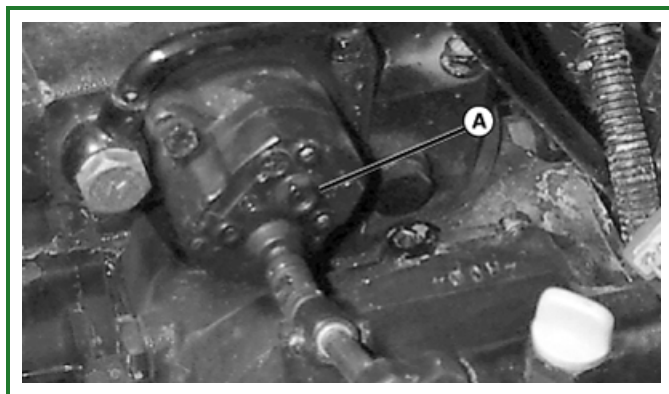

LVAL15229-UN: Rockshaft Sensitivity Adjustment

LEGEND:

A - Sensitivity Set Screw

Loosen lock nut on sensitivity set screw (A).

5. Install BW13586 ballast box, or approximately 227 kg (500 lbs.), on the three point hitch.
6. Slowly rotate set screw counterclockwise until lift arms begin to sway up and down.
7. Slowly rotate set screw clockwise until lift arms just stop swaying.
8. Rotate set screw an additional 1/2 to 3/4 of a turn clockwise. Hold set screw in this position and tighten lock nut.

Item	Measurement	Specification
Ballast Box	Approximately Weight	227 kg (500 lbs.)

