


5. Inspect the seat and replace, if necessary.
6. For tractors with pneumatic seat only, connect seat connector (C).
7. Install seat and tighten cap screws (A) and (B).

## 5G & 5GH Models

1. Disconnect battery. See [Remove Battery](#) .
2. Remove screws (A) from the front side of seat.

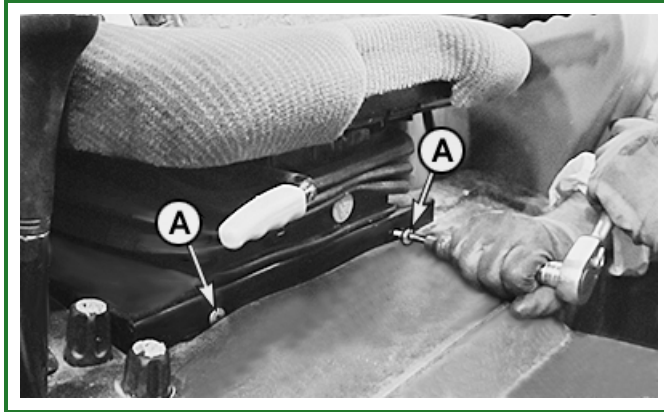


AGCPSJD0340-UN: .

3. Remove two screws (B) from rear side RH and LH of seat.



AGCPSJD0341-UN: .

4. Disconnect seat connectors (C) from the rear side of seat.

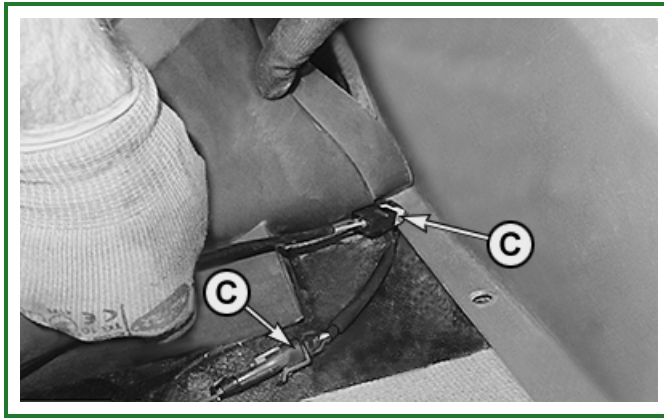

AGCPSJD0342-UN: .

5. Remove seat (D).



AGCPSJD0343-UN: .

### 5GV, 5GN & 5GF

1. Disconnect battery. See [Remove Battery](#) .
2. Disconnect seat connectors (A) from the right side of seat. Only for Air seat version.



PY22291-UN: .

**LEGEND:**  
A - Seat Connector