

Remove and Install Cab Recirculating/Fresh Air Filter


CAUTION:

The cab air filters do not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.


IMPORTANT:

Every time the engine primary filter element is serviced. Also remove the cab air filters (one on each side) and the recirculated air filter, and clean them with compressed air directed from the clean side.

1.

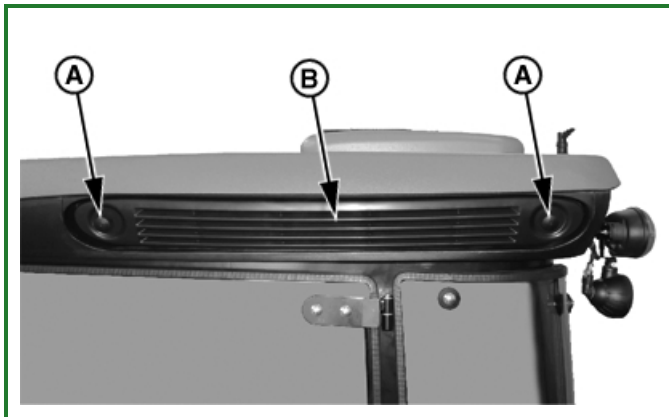

PY23841-UN: .

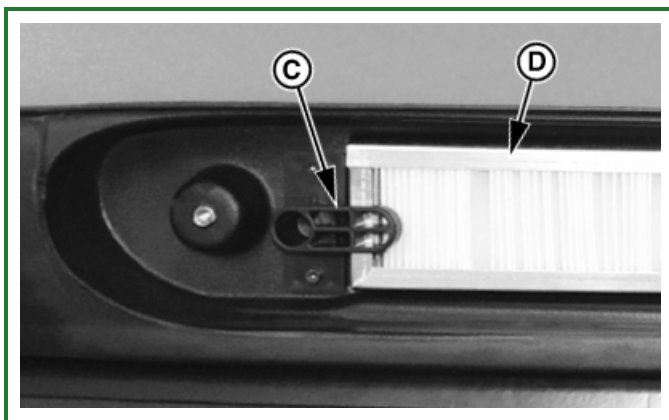

PY23842-UN: .

LEGEND:

A - Screw

B - Filter Cover

C - Lever

D - Air Filter Element

Remove the two screws (A) and filter cover (B) on each side.

2. On both sides, move up lever (C).

3. Remove air filter element (D). Note the position of element for reinstallation.

NOTE:

Replace cab air filters and recirculated air filter together with engine primary filter element (the latest after 1500 hours of operation or 2 years). For further information,

see Remove and Install Air Cleaner Element (5G VNF) or Remove and Install Air Cleaner Element (5075 Models) in section 30, Group 15.

4. Clean element with compressed air following the instructions on the filter.
5. Install air filter element (D).
6. On both sides, lock lever (C).
7. Install filter cover (B) and tighten screws (A).

Go to [Section_90:Group_25](#)

MS76789,000048A-19-20180209