

Remove and Install Heater Valve


⚠ CAUTION:

There is a danger of serious burns (scalding), so do this job only when the coolant temperature has dropped to a safe level.

1.



LX1032086-UN: Opening the radiator housing

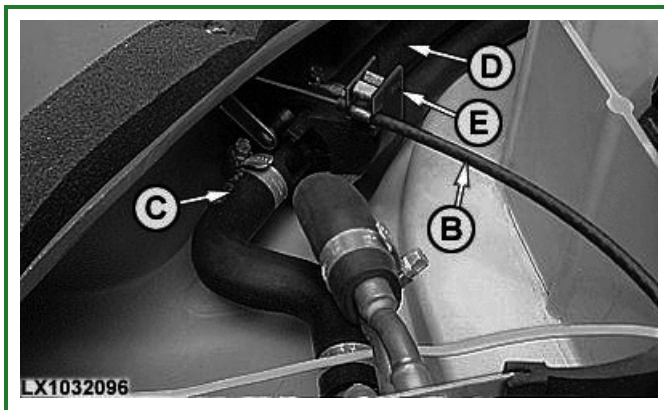

LX1032096-UN: Heater valve

Remove cover (A) from the heater/evaporator housing.

2. Disconnect control cable (B).
3. To prevent loss of coolant, use a suitable tool to compress the hoses (C) and (D).
Then slacken off the hose clamps and remove heater valve (E).
4. For installation, follow disassembly procedure in reverse order.

Engage and adjust control cable (B). See reference [“Adjust Heater Valve”](#) in this Group.


Go to [Section_90:Group_15](#)

OULXBER,0000A93-19-20030305

Adjust Heater Valve Bowden Cable



LX1032086-UN: Opening the radiator housing

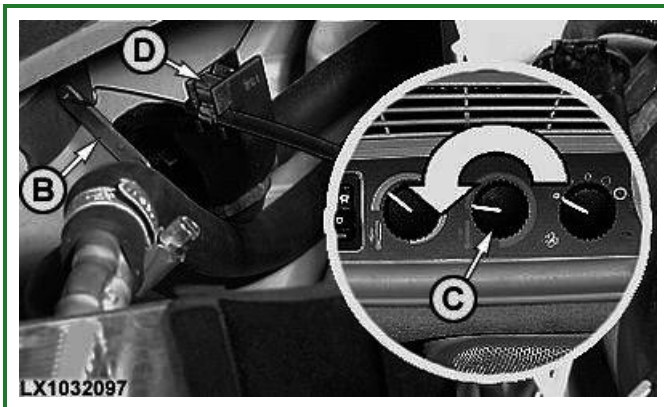

LX1032097-UN: Adjusting the heater valve

Remove cover (A) from the heater/evaporator housing.

Turn heater valve lever (B) and heater control knob (C) counter-clockwise as far as they will go. Then engage the bowden cable and secure it with clip (D).

Go to [Section_90:Group_15](#)

OULXBER,0000A94-19-20030305