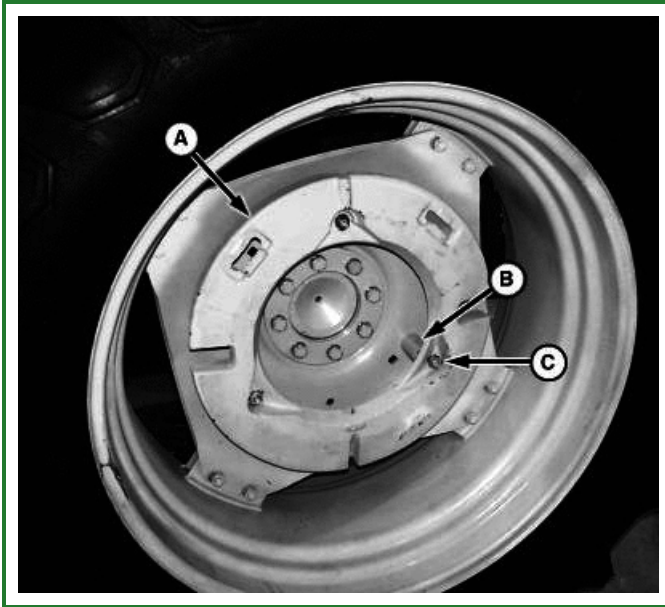


## Rear Ballast

1.

**⚠ CAUTION:**

*Rear weights weigh 55 kg (121 lb) each. Use a hoist or other suitable lifting device to remove and install wheel weights.*

**P9789-UN: Rear Wheel Weight****LEGEND:**

A - Wheel Weight

B - Spacer (3 used)

C - Cap Screw, Washer and Nut (3 used)


Attach first weight (A) to steel disk, using three spacers (B), cap screws, washers and nuts (C).

Item	Measurement	Specification
Rear Wheel Weights Weight		55 kg (121 lb)

2. Tighten cap screws and nuts to specification.

Item	Measurement	Specification
Rear Wheel Weight Retaining Cap Screw and Nut Torque		230 N·m (170 lb-ft)

3.

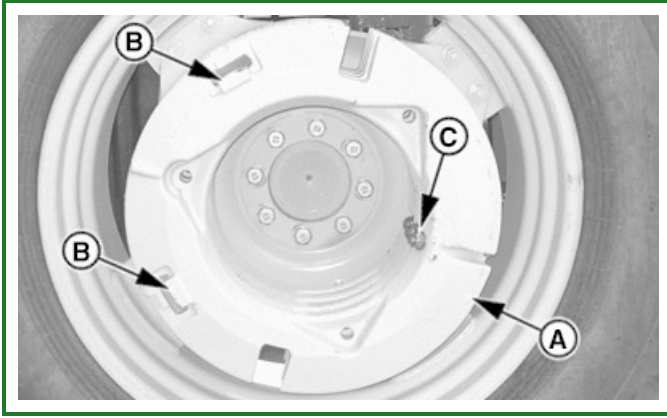**PUC3619-UN: Rear Wheel Weight****LEGEND:**

A - Wheel Weights

B - Hook (2 used)

C - Cap Screws, Washers and Nuts

Install additional weights (A) by resting them on hooks (B) and retaining them with cap screws, washers and nuts (C).

4. Tighten cap screws and nuts to specification.

Item	Measurement	Specification
Rear Wheel Weight Retaining Cap Screw and Nut	Torque	230 N·m (170 lb-ft)

Go to [Section\\_80:Group\\_15](#)

SS40167,00010D7-19-20091201