


Remove and Install Right-Side Control Console (IOOS)

1. Disconnect negative (—) battery cable.

2.

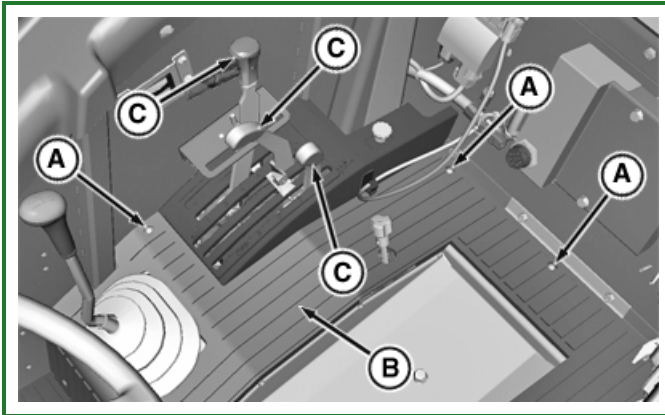

PY20763-UN: Right Side Control Console


LEGEND:

- A - Screws (3 used)
- B - Rear Floor Mat
- C - Grips


Remove screws (A) and rear floor mat (B)

3. Remove knobs (C) of position control lever, SCV control lever, and draft control lever.

4.

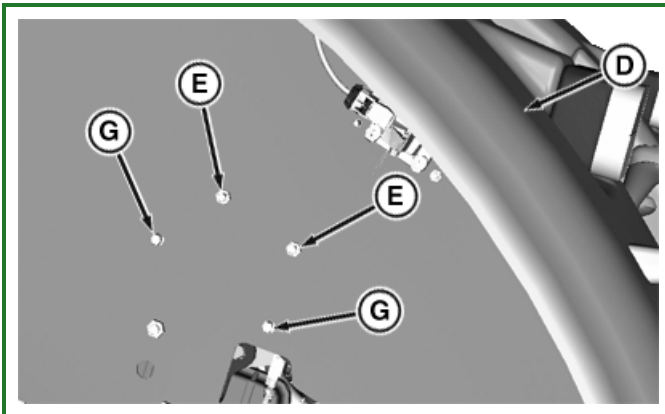

PY20764-UN: Right Side Fender

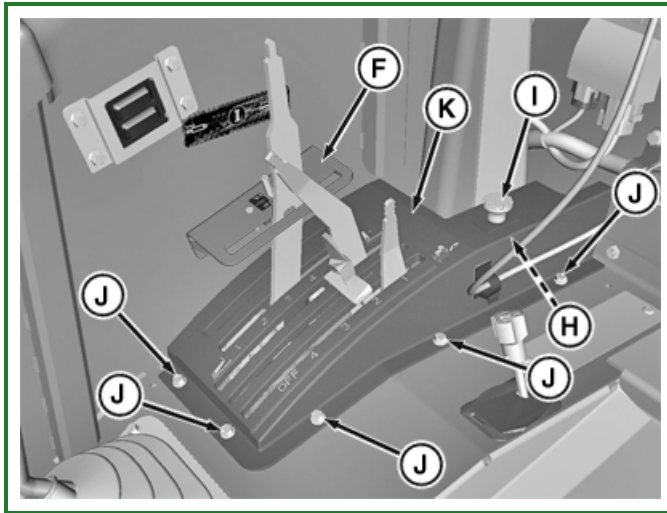

PY20765-UN: Right Side Control Console

LEGEND:

- D - Right Side Fender
- E - Nuts (2 used)
- F - SCV lever bracket
- G - Screws (2 used)
- H - EH PTO Switch Connector
- I - EH PTO Switch
- J - Screws (5 used)
- K - Control Console Cover

Remove nuts (E) and detach SCV lever bracket (F).

5. Disconnect the EH PTO switch connector (H).
6. Remove screws (J) and control console cover (K).
7. Repair or replace right console if necessary
8. Replace right console in reverse order of removal.
9. Adjust SCV lever if necessary. (Refer to Section 70, Group 15)
10. Connect positive (+) battery cable first and then negative (—) battery cable.

Go to [Section_91:Group_10](#)

JS86122,00003A4-19-20141104