


**Disassemble, Inspect, and Assemble Joystick—Mid Mount Coupler**

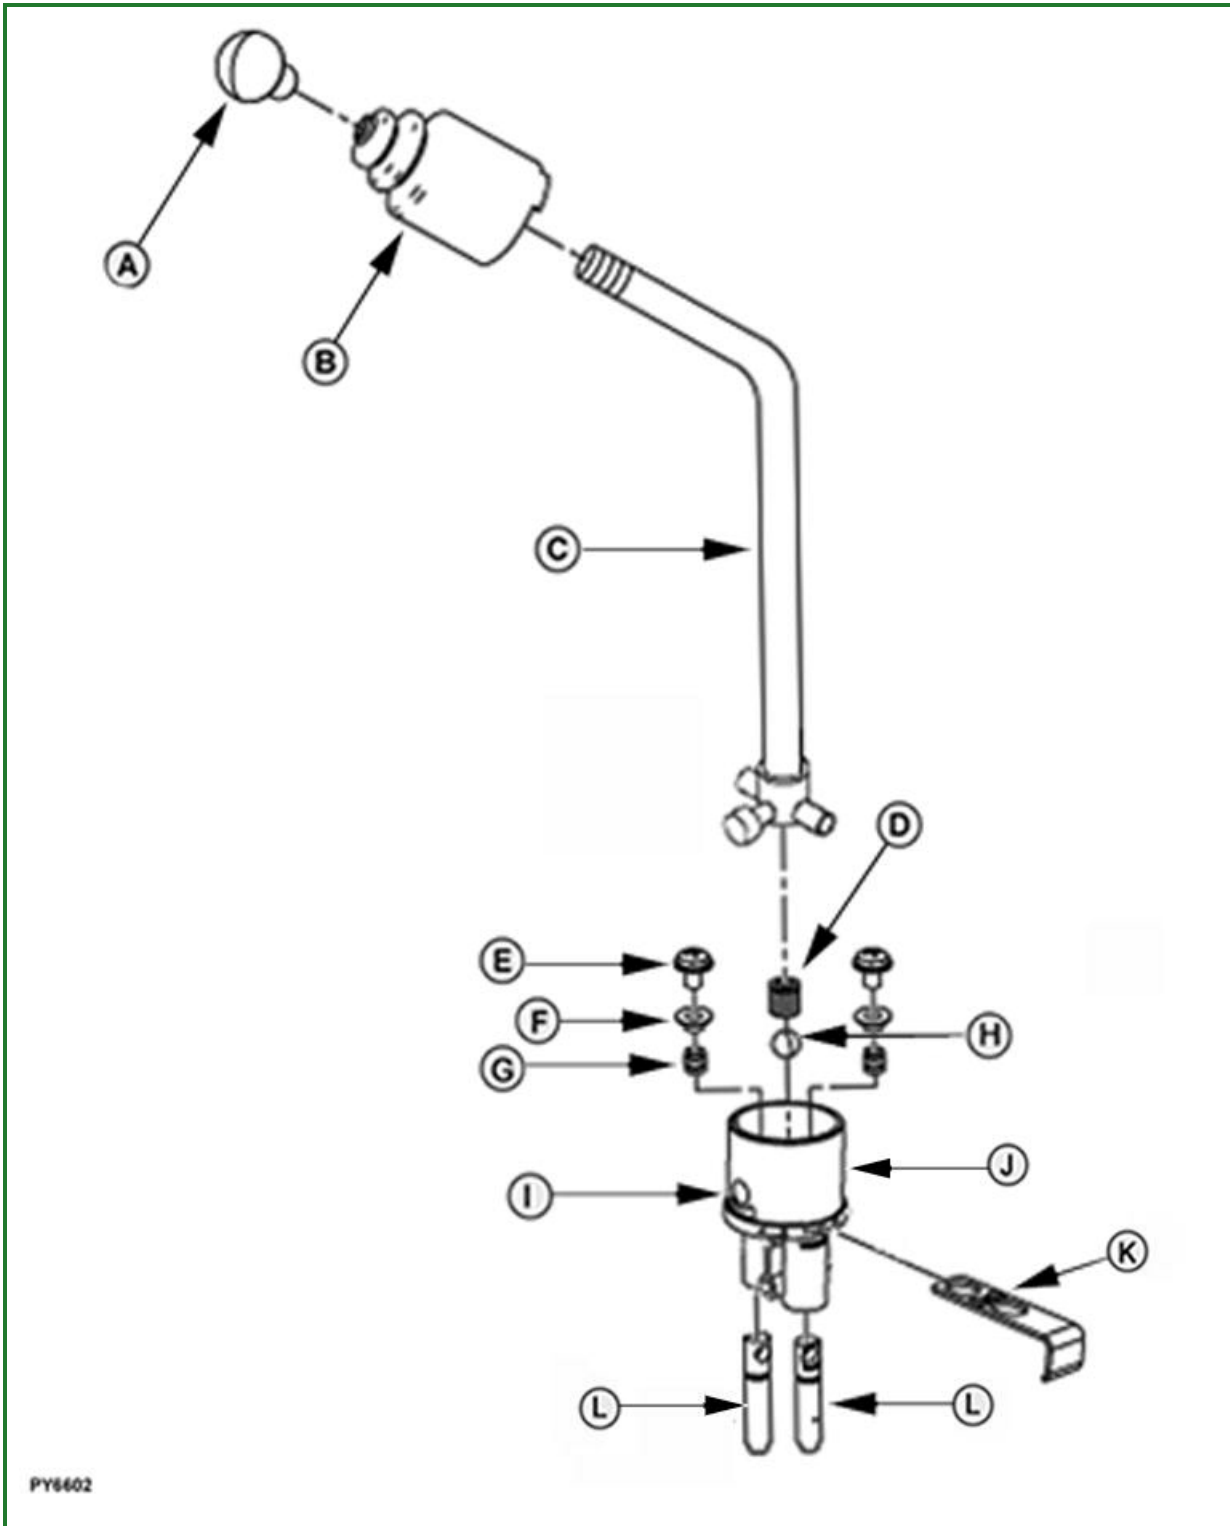

PY6602

**PY6602-UN: .**

**LEGEND:**

- A - Knob
- B - Boot
- C - Lever
- D - Piston (2 used)
- E - Seat (2 used)
- F - Housing
- G - Lubrication Hole
- H - Bushing (4 used)

I - Lubrication hole

J - Housing

K - Locking Plate

L - Piston

1. Disassemble joystick from control support. [Remove, Inspect and Install Joystick and Cables—Mid Mount Valve](#) (See procedure in this group.)
2. Remove knob (A) and then boot (B) from the lever (C).
3. Remove parts from (E) to (M).
4. Inspect all parts for wear or damage. Replace if necessary.
5. Apply multipurpose grease to moving components of joystick lever (C).
6. Apply multipurpose grease to lubrication hole (I).
7. Reinstall all parts.
8. Assemble joystick to control support. [Remove, Inspect and Install Joystick and Cables—Mid Mount Valve](#) (See procedure in this group.)

Go to [Section\\_70:Group\\_30](#)

SA61034,0000608-19-20080827