


Adjust A/C Temperature Control Switch


1.

NOTE:

The A/C temperature control switch is located in the evaporator/heater core housing, in the cab roof.

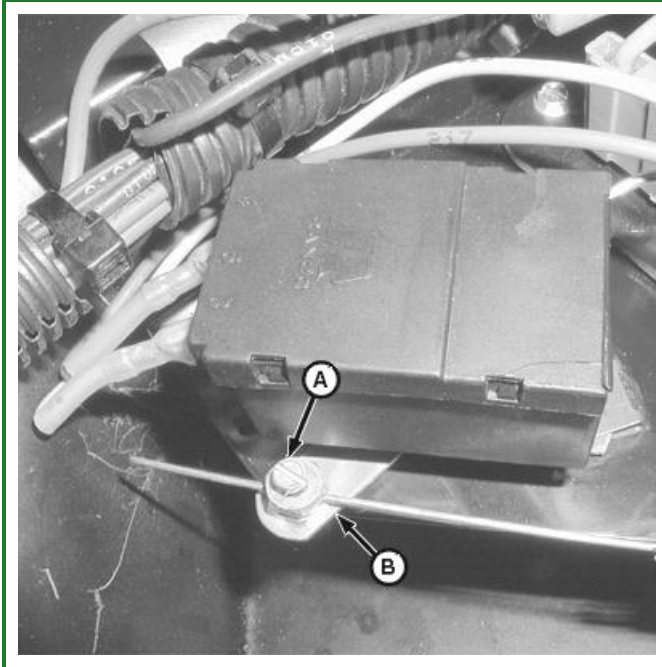

LV6464-UN: Fully Open Position

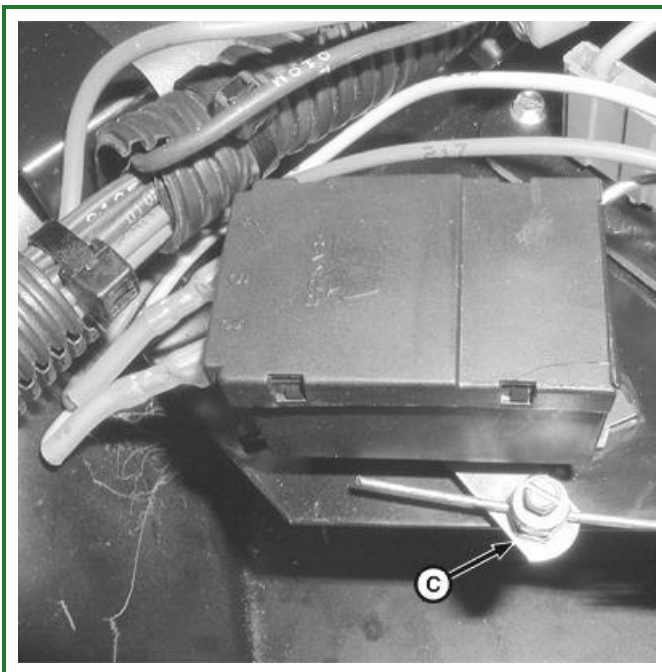

LV6465-UN: Fully Closed Position

LEGEND:

A - Set Screw

B - Control Switch Arm—Fully Open Position

C - Control Switch Arm—Fully Closed Position

Turn the A/C temperature control knob to full cool position (CCW).

2. Loosen set screw (A) and move the A/C temperature control switch arm to fully open position (B). Tighten set screw.
3. Turn the A/C temperature control knob to OFF (CW). A/C temperature control switch arm should be in fully closed position (C). Adjust arm as required.

Go to [Section_290:Group_15](#)

SP21231,00009EE-19-20141105