

**35.** Install a new O-ring (1) into the top bearing.



Fig. 63

**36.** Assemble the top bearing.

- (1) Mounting allen screws
- (2) Head bearing shaft
- (3) Washer
- (4) Head bearing
- (5) Cap
- (6) Allen screw

**37.** Tighten the allen screw (6) to 72 Nm (53 lbf ft).

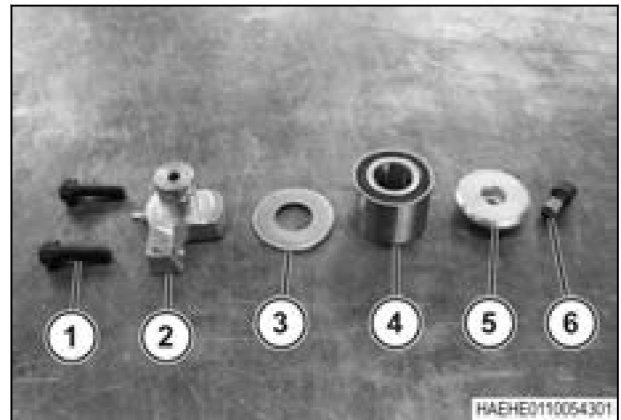


Fig. 64

**38.** Install the top bearing (2).

**39.** Install and tighten the mounting allen screws (1).



Fig. 65

## 4. Hydraulic system

<b>4.1 Changing the hydraulic oil filter</b> .....	<b>4-3</b>
<b>4.2 Hydraulic testing</b> .....	<b>4-4</b>
4.2.1 Testing the draper drive system pressure .....	4-4
4.2.2 Testing the reel drive system pressure .....	4-5
4.2.3 Testing the sickle drive system pressure .....	4-6
4.2.4 Testing the charge pressure for the header drive pump .....	4-8
<b>4.3 Sickle drive motor</b> .....	<b>4-10</b>
4.3.1 Sickle drive motor specifications .....	4-10
4.3.2 Removing the sickle drive motor .....	4-10
4.3.3 Installing the sickle drive motor .....	4-12
<b>4.4 Reel drive motor</b> .....	<b>4-15</b>
4.4.1 Reel drive motor specifications .....	4-15
4.4.2 Removing the reel drive motor .....	4-15
4.4.3 Installing the reel drive motor .....	4-16
<b>4.5 Draper drive motor</b> .....	<b>4-18</b>
4.5.1 Draper drive motor specifications .....	4-18
4.5.2 Removing the draper drive motor .....	4-18
4.5.3 Installing the draper drive motor .....	4-19
<b>4.6 Sickle drive relief valve</b> .....	<b>4-21</b>
4.6.1 Sickle drive relief valve .....	4-21
4.6.2 Removing the sickle drive relief valve .....	4-21
4.6.3 Installing the sickle drive relief valve .....	4-22
4.6.4 Disassembling the relief valve .....	4-23
4.6.5 Inspecting the relief valve housing .....	4-23
4.6.6 Assembling the relief valve .....	4-23
<b>4.7 Reel drive control valve</b> .....	<b>4-24</b>
4.7.1 Reel drive control valve .....	4-24
4.7.2 Removing the reel drive control valve .....	4-25
4.7.3 Installing the reel drive control valve .....	4-26
4.7.4 Inspecting the control valve housing .....	4-27
<b>4.8 Draper drive control valve</b> .....	<b>4-28</b>
4.8.1 Draper drive control valve .....	4-28
4.8.2 Removing the draper drive control valve .....	4-30
4.8.3 Installing the draper drive control valve .....	4-31
4.8.4 Inspecting the control valve housing .....	4-32
<b>4.9 Control valve cartridge</b> .....	<b>4-33</b>
4.9.1 Removing the cartridge .....	4-33
4.9.2 Inspecting the cartridge .....	4-33
4.9.3 Installing the cartridge .....	4-33
4.9.4 Testing the solenoid valve coil .....	4-34
<b>4.10 Reel lift master cylinder</b> .....	<b>4-36</b>
4.10.1 Removing the reel lift master cylinder .....	4-36
4.10.2 Installing the reel lift master cylinder .....	4-36
4.10.3 Reel lift master cylinder components .....	4-37
4.10.4 Disassembling the reel lift master cylinder .....	4-38
4.10.5 Inspecting the cylinder assembly .....	4-38
4.10.6 Assembling the reel lift master cylinder .....	4-39
<b>4.11 Reel lift slave cylinder</b> .....	<b>4-40</b>
4.11.1 Removing the reel lift slave cylinder .....	4-40