

6. Install the hinge hardware (1).

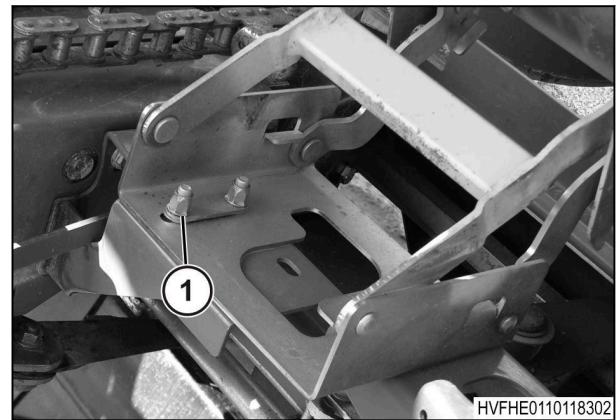


Fig. 3

7. Install the hardware (1) for the support.
8. Close the inner gathering assembly.

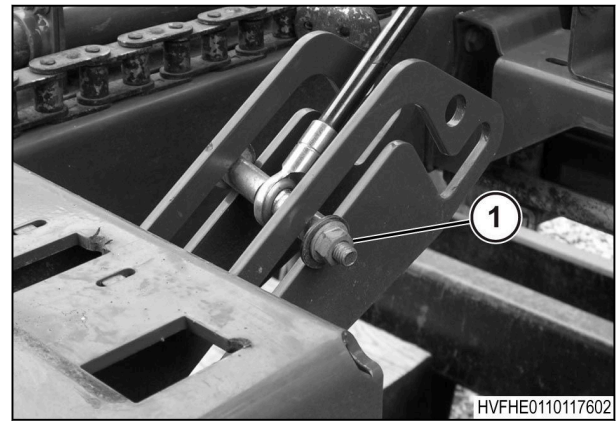


Fig. 4

6.1.3 Adjust the inner gathering assembly height

Procedure

1. Park the machine on a solid, level surface.
2. Lift the header fully.
3. Apply the parking brake, stop the engine, and take the key with you.
4. Engage the lift cylinder stop.
5. Open the inner gathering assembly.
6. Loosen the rear adjustment hardware (1).

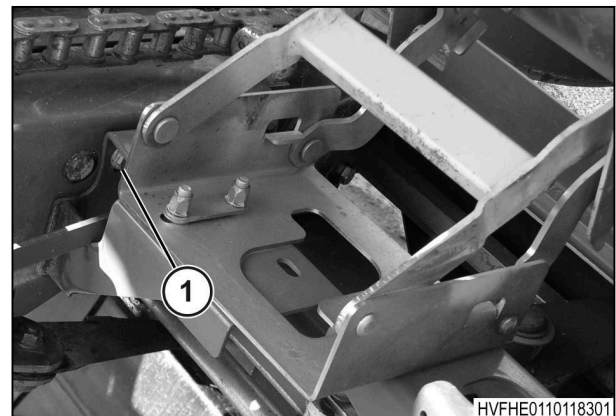


Fig. 5

7. Loosen the front adjustment hardware (1).

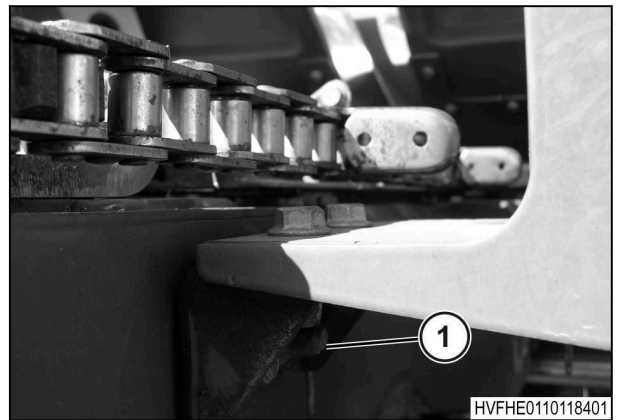


Fig. 6

8. Adjust the clearance (A) from 0.0 to 2.0 mm (0.0 to 0.08 in) from the chain guides (1).
9. Tighten the adjustment hardware.

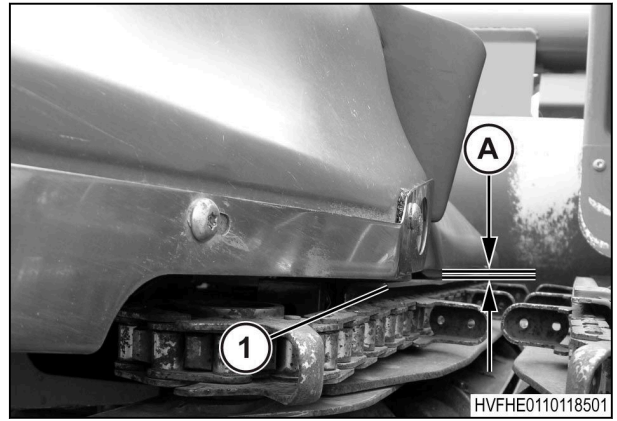


Fig. 7

6.1.4 Remove the snout

Procedure

1. Park the machine on a solid, level surface.
2. Apply the parking brake, stop the engine, and take the key with you.
3. Lift the header fully.
4. Engage the lift cylinder stop.
5. Open the inner gathering assembly.
6. Remove the safety pin (1).

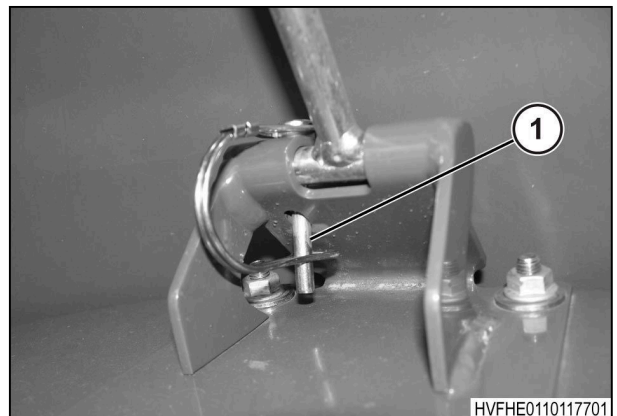


Fig. 8