

27. HANDLING DELUXE SEAT

WARNING

- Adjust the seat position at the beginning of each shift or when operators change.
- Adjust the seat so that the brake pedal can be depressed all the way with the operator's back against the backrest.

Ⓐ Fore-aft adjustment of seat

Pull up lever ①, the seat to a position where it is easy to operate, then release the lever.

Fore-aft adjustment: 160 mm (6.3 in) (17 stages)

Ⓑ Weight adjustment of seat

Turn knob ② under the seat to match the weight adjustment scale with your own weight.

The weight can be adjusted within a range of 50 – 120 kg (110 – 265 lb)

REMARK

If you want to make the seat softer, turn the weight adjustment to a lower weight; if you want to make the seat harder, adjust to a higher weight.

When operating on uneven surfaces, adjust the seat to a harder setting.

Ⓒ Adjusting reclining angle

NOTICE

When reclining the seat back to the rear, check the space behind, and adjust to a suitable position.

Pull lever ③, set the seatback to a position where it is easy to operate, then release the lever.

Ⓓ Adjusting seat tilt

Pull up lever ④ to remove the lock, set the seat to the desired position, then release the lever to lock the seat in position.

Tilt adjustment: 13° up and down.

Ⓔ Height adjustment of seat


Pull levers ④ and ⑤ up at the same time to remove the lock, set the seat to the desired position, then release the lever to lock the seat in position.

Height adjustment: 65 mm (2.6 in)

Ⓕ Adjusting direction of seat

When lever ⑥ is moved to the left, it is possible to turn the seat manually to the right to change the position by 15°.

After changing the direction of the seat, move the lever back securely and lock it.

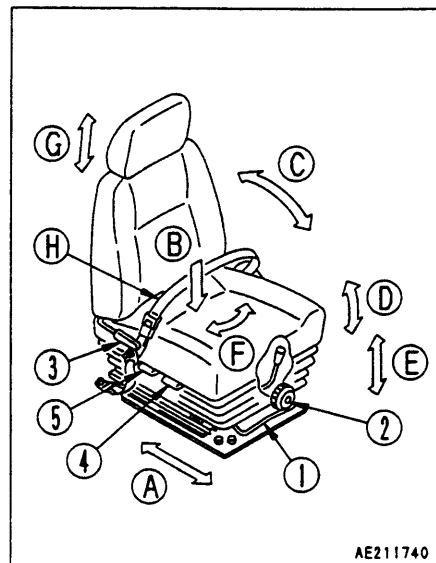


AE211740


27. HANDLING DELUXE SEAT

Ⓒ Adjusting height of headrest

- To make it higher
Hold the headrest and pull it up.

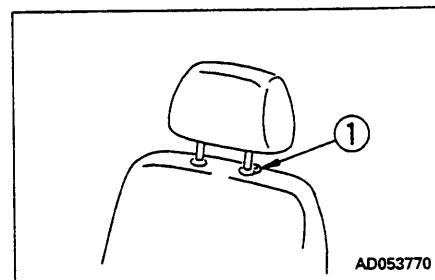

- To make it lower
Keep knob ⑦ pushed down, and push the headrest down to the desired position.
Height adjustment: 60 mm (2.6 in) (2 stages)

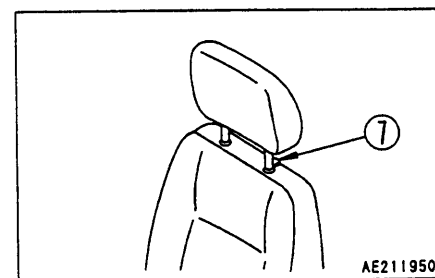

Ⓗ Using seat belt


When operating a machine equipped with ROPS, be sure to use the seat belt.

WARNING

- Before fastening the seat belt, inspect the securing brackets and belt for abnormal conditions.
Replace any worn or damaged seat belt or the securing brackets.
- Even if there appears to be no abnormality with the seat belt, always replace it once every three years. The data manufacture is woven on the reverse side of the belt.
- Adjust and fasten the seat belt before operating the machine.
- Always use seat belt when operating the machine.
- Fit the seat belt across your lap without twisting.

- **Fasten the belt and remove it in the following manner**

1. Adjust the seat so that the brake pedal can be depressed all the way with the operator's back against the backrest.
2. After positioning the seat, adjust the tether belt ①. With the seat unoccupied, tense the belt slightly across the seat and install.
3. Sit in the seat, hold the tongue of reel ②, and pull the belt out slowly to a length which fully covers your lap.
4. Insert the tongue into buckle ③ and push until there is a click. Pull back reel ② until the belt fits securely across your lap. In this condition, the lock is applied to prevent the belt from extending any further.
Fit the seat belt across your lap without twisting.

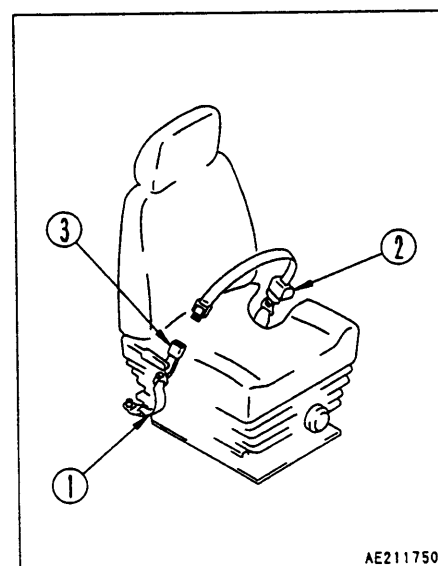

REMARK

If the lock is applied before the tongue is installed into the buckle, return the belt to the reel, then carry out the operation again from the beginning.