40 TOOTH SPROCKET

Operation

The 40 tooth sprocket is connected to and turns the drive shaft.

Removal

Remove drive chain.

FIG. 11: Loosen the set screws in the four lock collars (1).

Remove the two slotted spring pins (2).

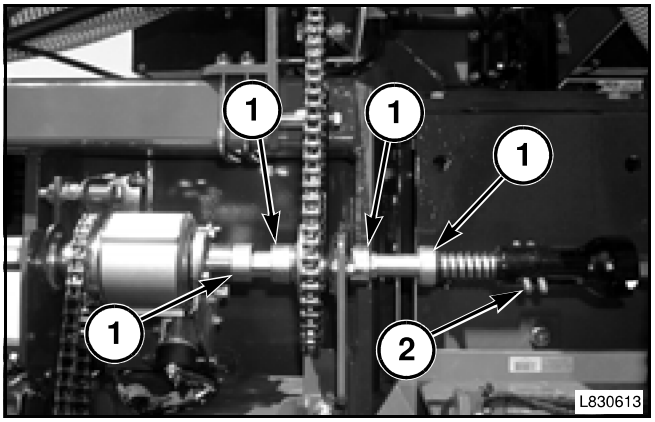

FIG. 11

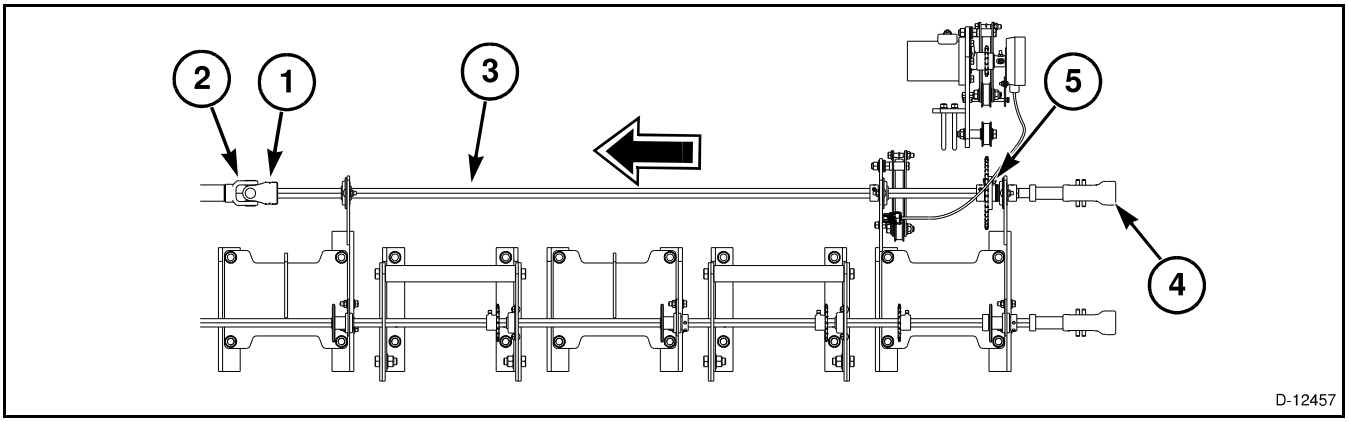

FIG. 12

FIG. 12: Place planter in folded position when removing drive shaft.

Remove the pin (1) from the yoke (2). Slide the yoke off the drive shaft (3).

Remove the coupling assembly (4).

Slide drive shaft out and remove the 40 tooth sprocket (5).