


UPPERSTRUCTURE / Cab

6. Loosen cab mounting bolts (9) (6 used), (10) (7 used) to remove the cab.

 : 17 mm
 : 8 mm

7. Disconnect ground wire (11) from the cab.


 : 13 mm

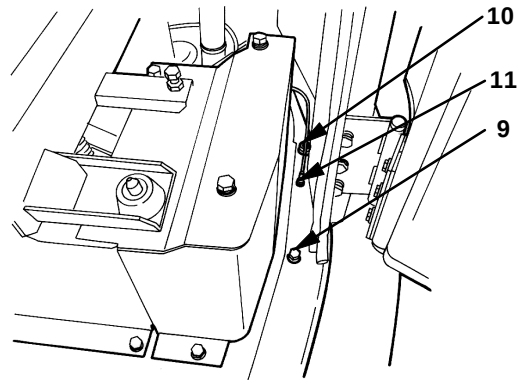

W196-02-01-001

 **CAUTION: Cab weight: 178 kg (392 lb)**

8. Lift and remove cab (12) slowly using a crane.

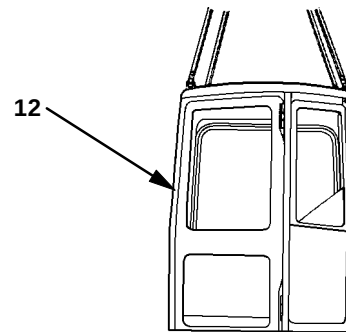

W190-02-03-009


UPPERSTRUCTURE / Cab

Installation



CAUTION: Cab weight: 178 kg (392 lb)

1. Attach lifting straps to cab (12). Lift the cab and lower it onto the frame using a crane.

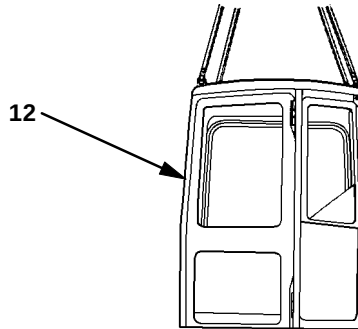


2. Install cab (12) with bolts (9) (6 used) and (10) (7 used).

- : 17 mm
- : 49 N·m (5 kgf·m, 36 lbf·ft)
- : 8 mm
- : 49 N·m (5 kgf·m, 36 lbf·ft)


3. Connect ground wire (11) to the cab.

- : 13 mm
- : 20 N·m (2 kgf·m, 14.5 lbf·ft)

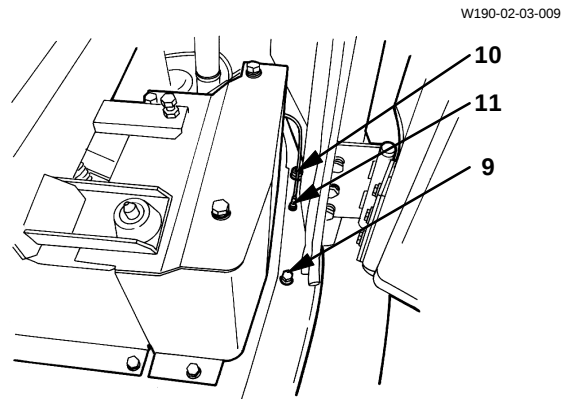

4. Install footrest (7) with bolts (8) (2 used).


- : 17 mm
- : 49 N·m (5 kgf·m, 36 lbf·ft)

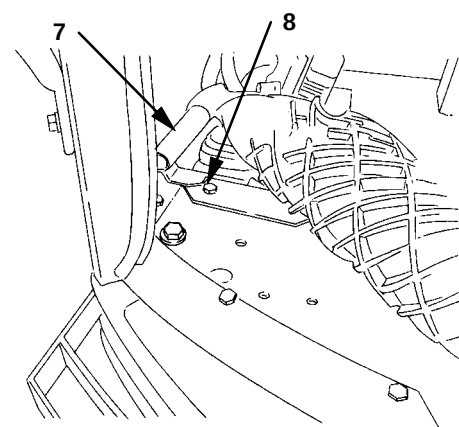

5. Install fuse box (6) onto cover (5).



6. Install cover (3) located behind seat (2) with nuts (4) (9 used).

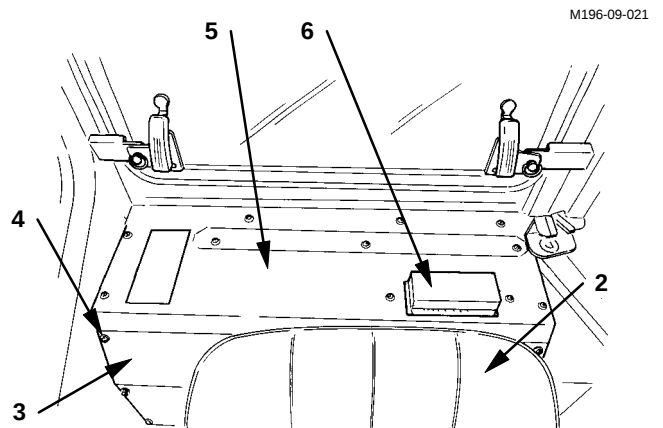

T196-01-02-004