

Frame and Counterweight

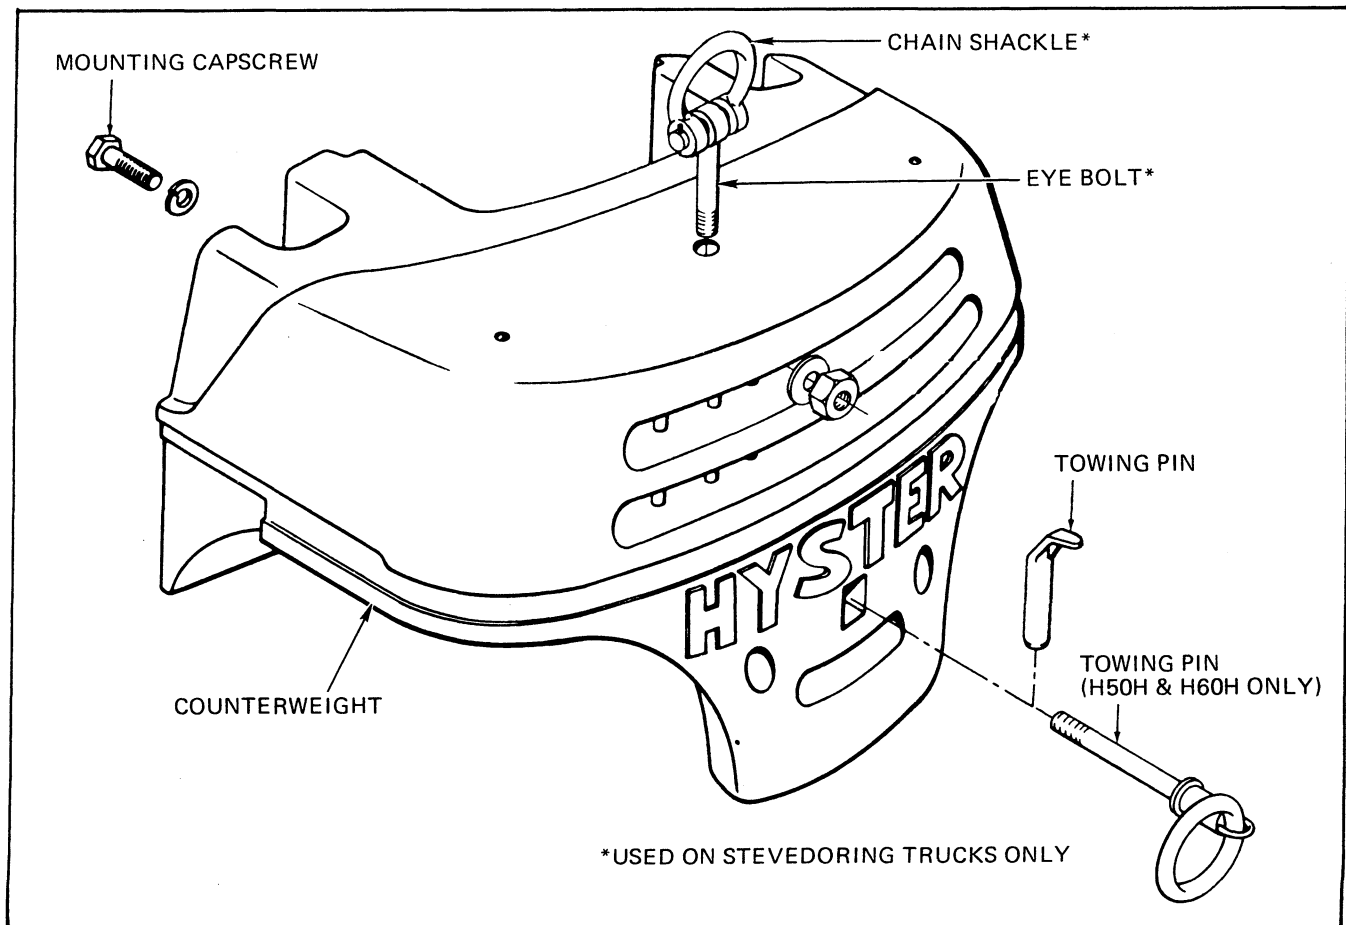


FIGURE 13-2. COUNTERWEIGHT

13-6. INSTALLATION OF COUNTERWEIGHT. (See Figures 13-2 and 13-3.)

13-7. To install the counterweight, proceed as follows:

- a. Carefully lift the counterweight into place.
- b. Install the six capscrews and lockwashers, then tighten.
- c. Remove the sling from the counterweight.
- d. Install the exhaust system as described in Section 12.
- e. Install the hood, then the overhead guard.

13-8. HOOD. (See Figure 13-4.)

13-9. OVERHEAD GUARD. (See Figure 13-5.)

13-10. The overhead guard is a one-piece unit that can be removed from the truck. To remove this unit from the truck, remove the four 3/4-inch UNC X 1-3/4-inch long capscrews, then carefully lift the overhead guard from the truck.

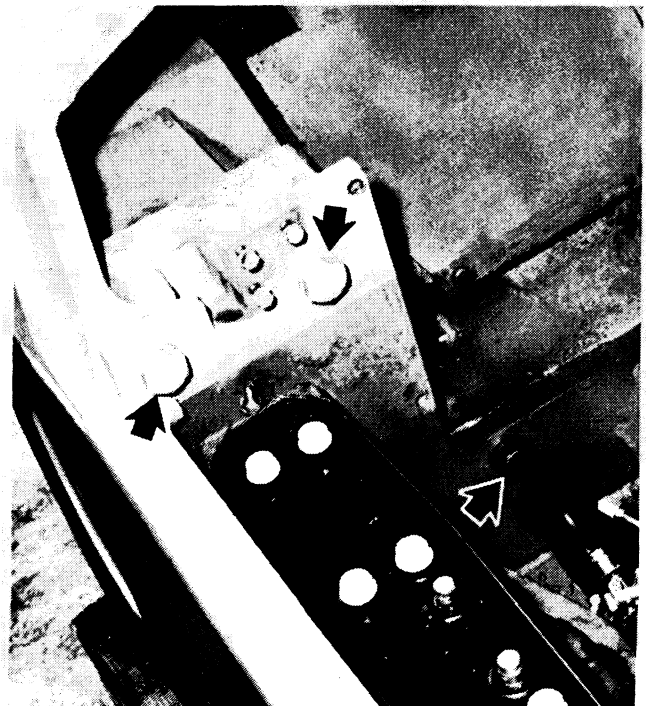


FIGURE 13-3. COUNTERWEIGHT AND MOUNTING CAPSCREWS