

8. Preassemble adjustment plate (13). Do this by pressing adapter (5) and adapter cap (9) against each other.

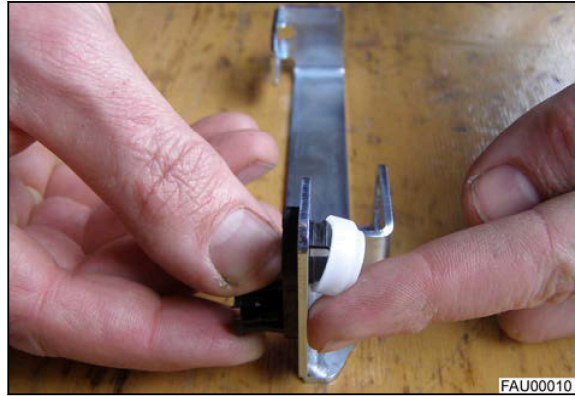


Fig. 235

9. Use screw (6), washer (7) and nut (8) to securely attach adapter (5).



Fig. 236

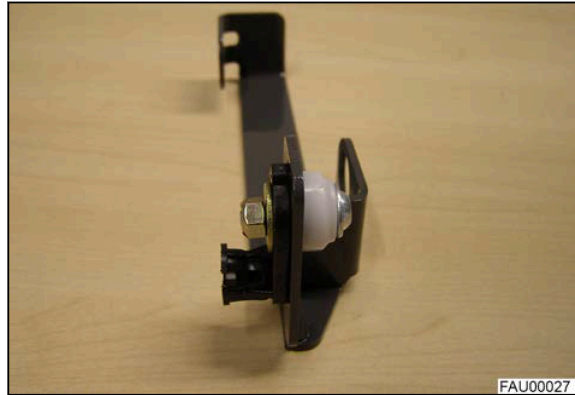


Fig. 237

10. Push the adjustment plate onto the lower joint part.

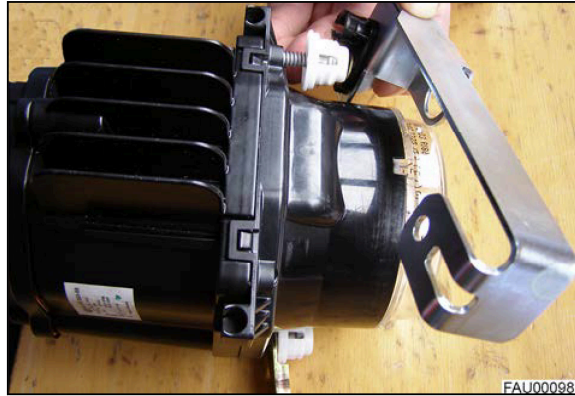


Fig. 238

11. Securely attach the adjustment plate to the headlamp using screw (12) and washer (17).

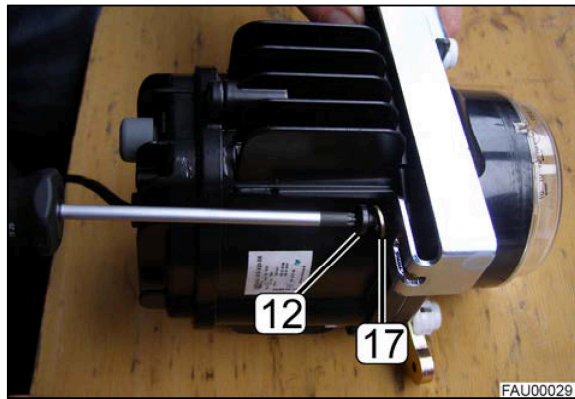


Fig. 239

12. Press clamp (14) onto the joint part with a 17-mm socket.

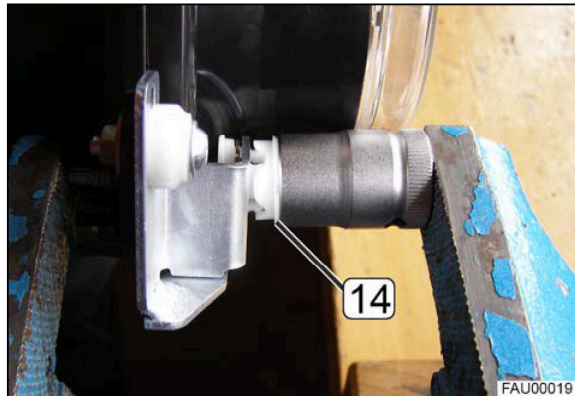


Fig. 240