

Removal and installation of KOMTRAX communication modem assembly


Removal

- ⚠ Disconnect the negative terminal (–) of the battery before starting the work.

1. Remove covers (1) – (4).



2. Twist antenna wire (5) and disconnect it.
3. Disconnect connectors K01(6) and CK02 (7).
4. Remove the 4 mounting bolts and KOMTRAX communication modem assembly (8).

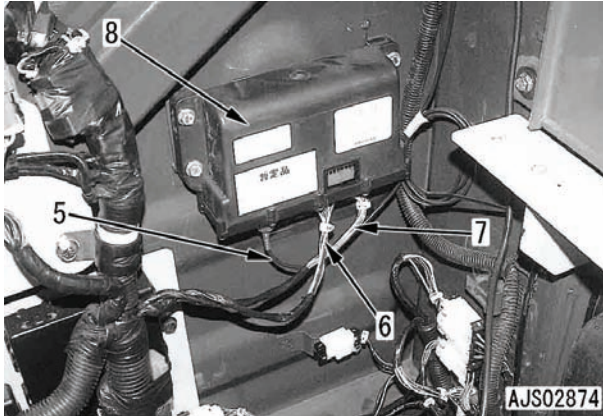

Installation


- Installation is done in the reverse order of removal.

Removal and installation of monitor assembly

Removal

- ⚠** Disconnect the negative terminal (–) of the battery before starting the work.

1. Remove cap (1).
2. Remove cover (2) and then disconnect wiring connector P31 (3) for air conditioner sunlight sensor (S).
3. Remove duct (4).
4. Remove cover (5) as follows. [^{*}1]
 - 1) Insert flat-head screwdriver inside slit (SL) and push it upward.
 - 2) Release lock (L) and remove the cover.
 - 3) Disconnect wiring connector M04 of the cigarette lighter from the back of cover (5).

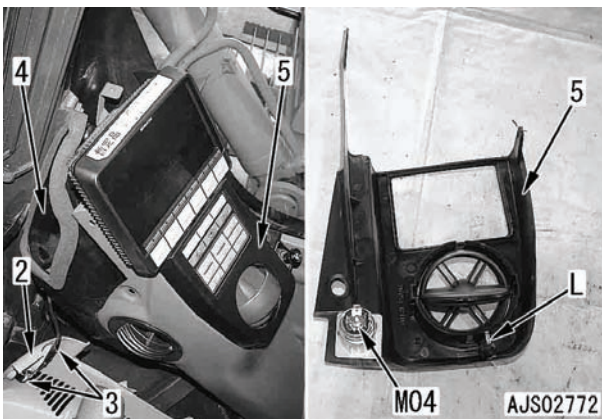

5. Remove the 4 mounting bolts and lift monitor assembly (6). [^{*}2]
6. Disconnect connectors CM01 (7), CM02 (8) and CM03 (9).
 - ★ Since CM02 (8) and CM03 (9) can be installed reversely, be careful not to mistake. CM 03 (9) is a green connector.
7. In the case of rear camera specification, disconnect connector CN-5 (11).
8. Disconnect connector (10).

