
Note: Clean all pins and the bores in order to remove any dirt or corrosion before assembly.

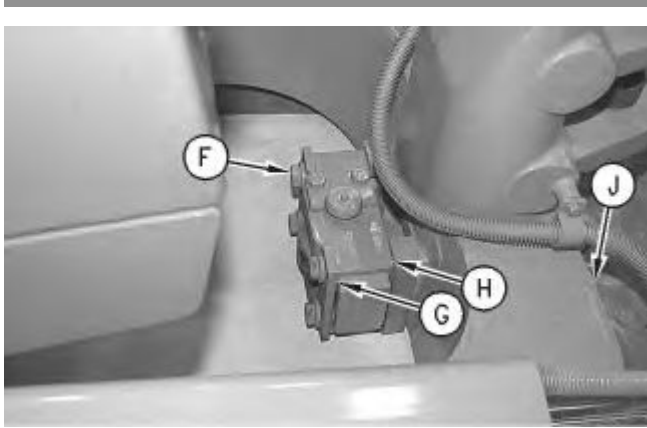


Illustration 2

g00665986

1. Loosen bolts (F) on block assembly (H) that is located on the back side of C-frame (J). Remove two spacers (G) .

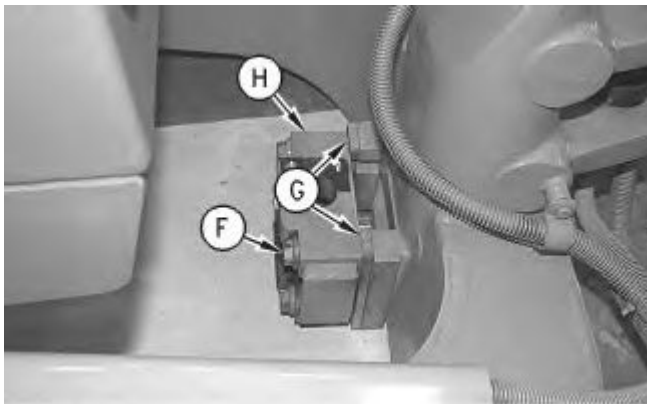


Illustration 3

g00665992

2. Reposition spacers (G) in front of block assembly (H) .

Note: Spacers (G) may already be located in front of block assembly (H) as a result of previous adjustment.

3. Hand tighten four bolts (F) .
-