

Illustration 17

g00653391

19. Connect two hydraulic hoses (11) and (10) .
20. Install rubber mat (9) in the machine.



Illustration 18

g00505030

21. Install bolt (8). Bolt (8) secures a portion of mat (9) to the firewall.

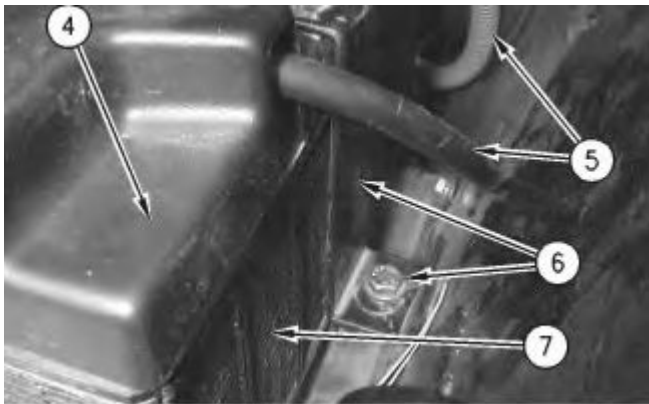


Illustration 19

g00623865

22. Install battery (7). Install two battery cables (5). Install battery cover (4). Install battery clamp and bolt (6) .