

1 Programming

IMPORTANT: With a new Autotronic 4, it is necessary to begin by setting parameters. Programming can then be carried out, only to update the software delivered with the new unit, if required.

NOTE: Programming of the Autotronic 4 is necessary:

- if the controller has been replaced by a new unit and if the software installed in the new unit is an older version than the version present in Wintest
 - if there is a new program as a result of product improvement
1. Switch on the ignition to carry out this operation. The engine must be stopped.
 2. Start Wintest.

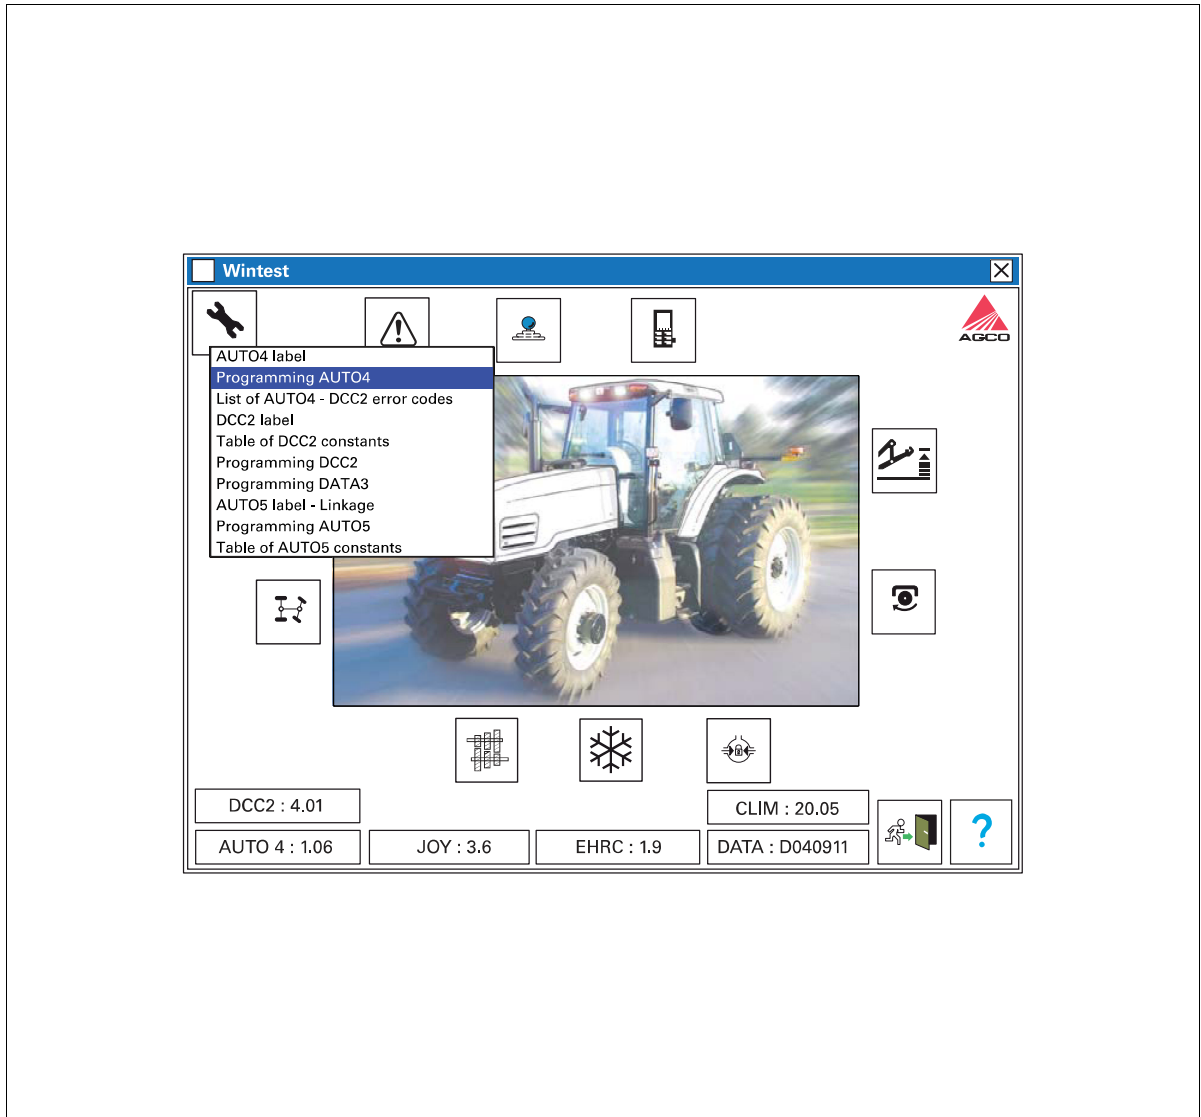


Fig. 1.

1017479

3. Click on the "Tools" icon and then on "Programming AUTO4".

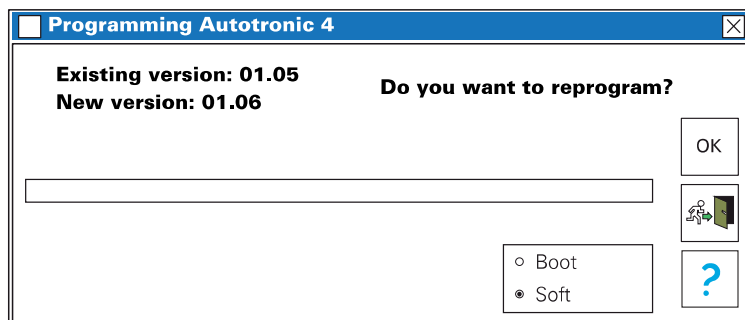



Fig. 2.

I017240

4. The screen [fig. 2](#) is displayed.
There are 2 available choices:
 - Updating the Boot (only for controllers currently programmed with version 01.04 or 01.05)
 - Programming the software

Updating the Boot

NOTE: Updating the Boot is only for controllers currently programmed with version 01.04 or 01.05. If the program version is later, only the software needs to be programmed.

1. Select the Boot line if the controller is programmed with version 01.04 or 01.05.
2. Click on:
 - "OK" to accept programming
 -  to cancel programming

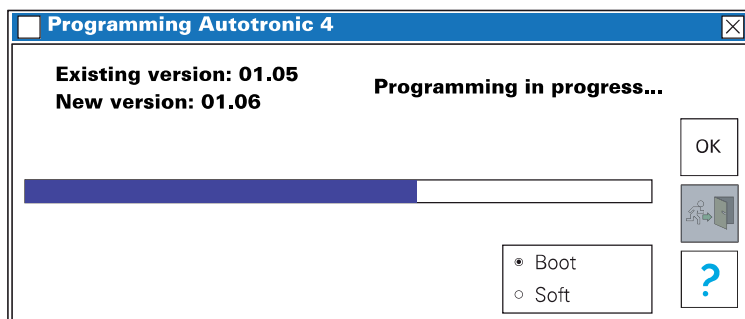


Fig. 3.

I017241

3. The screen [fig. 3](#) appears, displaying a progress bar in the lower part of the screen to indicate the Boot programming status.
Programming takes approximately 30 seconds.
4. When programming is complete, the window closes.
NOTE: To validate the Boot update, switch off the ignition.
It is now possible to program the control unit with software version 01.06.