

Hay Conditioner

FIG. 115: Install the belt (1) onto the sheaves.

Hold the spring plug (2). Turn the adjusting bolt (3) until the dimension (A) from the inside of the hook to the end of the spring plug is 220 mm (8.66 in). Tighten the jam nut (4).

NOTE: Too much tension can cause premature belt failure.

Install the sensor bracket (5) to the machine. Remove the sensor bracket. Make sure that the sensors are adjusted correctly. See Electrical Sensors in the Electrical section.

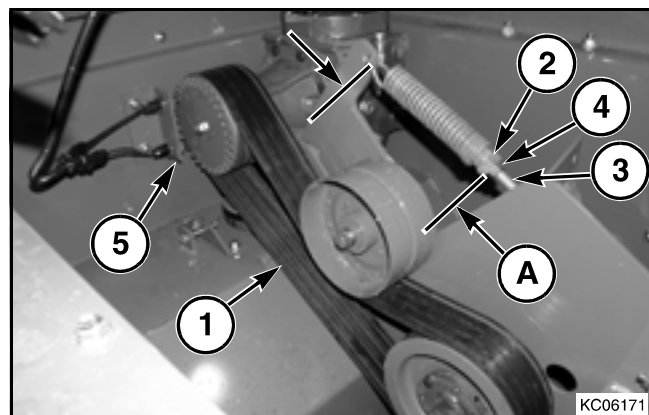


FIG. 115

FIG. 116: Install the sensor bracket (1) and sensor sprocket (2) onto the right-hand side of the rotor. Make sure that the sensor is adjusted correctly. See Electrical Sensors in the Electrical section.

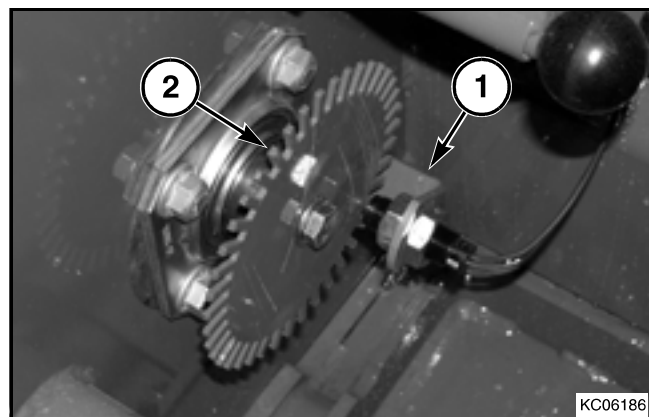


FIG. 116

TROUBLESHOOTING
Contents

TROUBLESHOOTING 8-1
Header 8-2
Cutterbed 8-3
Hay Conditioner 8-4
Cutoff Quality 8-5
Crop Conditioning and Windrow Formation 8-7